

CLEAN-OUT COVER 1-00-06623

INSTALL INSTRUCTIONS

Replaces MPNs: 1-00-06623

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the power source.

2. Access the Unit

- Locate the burn pot in the stove. The cleanout cover is mounted inside the burn pot.
- Open the stove's front door to gain access to the burn pot.

3. Remove Old Cover

- Loosen the two wing nuts securing the burn pot clean-out cover to the bottom of the burn pot.
- Once both wing nuts are loosened the cover plate can be removed
- Proceed to remove the two wing nuts if the replacement includes wing nuts.

4. Install New Cover

- If the wingnuts were removed in Step 3, insert and turn the new wing nuts so they stand in position in the burn pot.

- Insert the clean-out cover to the burn pot, orient the cleanout cover so the side hooks hook over the wing nuts.
- Tighten the wingnuts to secure the cover.

5. Connect Power

- Close the front door of the stove.
- Plug the stove's power cord into the power source.
- Your new igniter and cradle assembly is installed and ready to use.

Post-Installation Check

- Verify all connections are secure
- Test igniter operation before closing panels. The igniter should visually glow red hot and emit heat.
- Be careful not to touch the igniter rod while testing or operating, allow the unit to cool completely before making any adjustments.

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.