

13646109

Convection Blower

INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug your stove from the power.

2. Access the unit

- Remove or open any necessary access panels on the stove to access the exhaust blower.
- The location of the panels may vary by model, but will generally be located in the rear area of the stove.
- Locate the convection blower on the left side of the stove.

3. Disconnect Fan Wiring

Unplug the blower wiring connectors from the wiring harness.

Tip: you can take a photo of the wires to note the color coding of the wires and connections before removal.

4. Remove Old Blower

- Remove the 4 hex nuts that hold the blower mounting flange to the stove.
- Pull the old blower and gasket out of the stove.

5. Install New Blower

- Install your new blower with a gasket in the same orientation as the old blower with the 4 hex nuts removed prior.
- When installing a new blower to a Quest series model, this blower fits Quest Plus only.
- Regular Quest (Non-Plus version) takes blower motor part # 12056010 instead. If you aren't sure which Quest you have, check behind the stove or under the hopper lid for the model information.

6. Connect Blower Wiring

Plug the new blower's wiring connectors into the wiring harness in the same connections as the original blower.

7. Final Assembly

Install the removed wiring access panels.

8. Power Connection

Plug in the stove to test.

Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.

