

156477

Convection Blower

INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug your stove from the power.

2. Access the unit

Remove the blower flex conduit assembly from the stove to access the blower.

3. Disconnect blower Wiring

Disconnect the blower from the wiring assembly by disconnecting the AC wire connector from the right blower assembly.

Tip: you can take a photo of the wires to note the color coding of the wires and connection before removal.

4. Remove Old Blower

- Loosen or remove the screws holding the old blower to the assembly.
- Pull the fan from the mounting in the blower flex conduit assembly.

5. Install New Blower

Install the replacement blower to the mounting using the original mounting screws.

6. Connect Blower Wiring

Reconnect the AC wire connector to the new blower.

7. Final Assembly

Reinstall the blower flex conduit assembly to the stove.

8. Power Connection

Plug in the stove to test.

Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.