

# 228-10070

## Convection Blower (Motor Only)

### INSTALL INSTRUCTIONS

---

#### Before Installing

- **ALWAYS** unplug the unit before beginning any work
  - Allow the unit to cool completely if recently used
  - Work in a well-lit area with proper tools
- 

#### Installation Steps

##### 1. Power Disconnection

Unplug your stove from the power.

##### 2. Access the Unit

- Remove any necessary panels to gain access to the convection blower.
- The location of the blower may vary by model, refer to your unit's owner's manual for reference of the location.

##### 3. Disconnect Fan Blower

Unplug the wiring harness connections from the blower motor wiring terminals.

**Tip:** you can take a photo of the wires to note the color coding of the wires and connections before removal.

##### 4. Remove Old Blower

- Loosen or remove the screws holding the old blower to the mounting bracket.
- Remove the old blower from the mounting bracket.

- If your unit's blower mount assembly can be removed from the stove, remove the blower mount from the unit before removing the blower from the blower mounting bracket for easier access.

## 5. Install New Blower

- Install the new blower to the blower mounting with screws.
- If your unit's blower mounting was removed from the unit, reinstall the blower assembly after installing the new blower to the mounting bracket.

## 6. Connect Blower Wiring

Reconnect the wires from the wiring harness to the blower assembly wiring terminals in the same positions and coloring as the old blower.

## 7. Final Assembly

Install the removed wiring access panels.

## 8. Power Connection

Plug in the stove to test.

---

## Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

---

## Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.