

BAFFLE BOARD 2429A

INSTALLATION INSTRUCTIONS

Replaces MPNs: 90-76400

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the powersource.

2. Access the Unit

Open the main door to the unit. The baffle(s) will be sitting on the inside of the stove firebox, typically laying on top of the reburn tubes in the top of the unit.

3. Remove Old Baffle

- Pull out and discard the damaged baffle from the firebox.
- If it is still in place above the secondary air pipes, lift the back end up so that the front edge of the baffle will come down and slide out between the two air pipes.

4. Install New Baffle

- Insert the new baffle assembly in the firebox with the bracket on the top and to the rear of the firebox.

- Work the back end of the baffle up between the front and rear secondary air pipes and allow the baffle to drop down onto the tubes.
- Make sure the baffle support is in place on the front secondary air tube, and the baffle board should be seated on the baffle support.
- Secure the baffle to the air tubes with the supplied wires. Each of the wires should be placed so that one end is in front, and one end is in the back of the rear air pipe. The loose ends of the wires can now be wrapped around the rear tube. Twist-tie both and bent them out of the way.

5. Connect Power

- Close the main door of the stove. Ensure the door is sealed when closed.
- Plug the stove's power cord into the power source.
- Your new baffle is installed and ready to use.

Post-Installation Check

- Verify all connections are secure
- Test the seal of the door to ensure proper fitment. The door should be sealed tightly when both the handle is secured and the gasket is at proper thickness.
- Check the baffle for damage before final installation.

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.

