

# 250-02610

## Combustion Blower

### INSTALLATION INSTRUCTIONS

---

#### Before Installing

- **ALWAYS** unplug the unit before beginning any work
  - Allow the unit to cool completely if recently used
  - Work in a well-lit area with proper tools
- 

#### Installation Steps

##### 1. Power Disconnection

Unplug the unit from the power source and ensure it has cooled completely.

##### 2. Access the Unit

Open the service panel to access the exhaust blower assembly.

##### 3. Locate Exhaust Blower

Find the exhaust blower assembly within the unit.

##### 4. Disconnect Wiring

Carefully disconnect all wiring from the exhaust blower

**Tip:** Take a photo of wire connections before disconnecting

##### 5. Remove Old Blower Assembly

- Unscrew and remove the exhaust blower motor from the unit
- Set aside any gaskets for replacement

##### 6. Install New Blower Assembly

- Replace blower motor along with any gaskets that were disturbed
- **Important:** If the venting adapter was removed, apply RTV silicone to the venting adapter and secure it with a single self-tapping screw

## 7. Reconnect Venting

Reconnect any venting that was disconnected during removal.

## 8. Connect Blower Wiring

- Connect the wiring to the blower motor
- **Note:** The wiring terminals are non-polarized, so either terminal can connect to the wiring harness regardless of color connections on the previous blower motor

## 10. Final Assembly

Close the service panel securely.

## 11. Power Connection

Plug the stove back into the power source.

---

## Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

---

## Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.