

DOOR LATCH 25080

INSTALLATION INSTRUCTIONS

Replaces MPNs: 25080

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the powersource.

2. Access the Unit

Open the main door to the unit. The latch will be fastened to the frame of the stove firebox, mounted to the area where the handle of the door would sit when closed.

3. Remove Old Door Latch

- Prior to disassembly, take clear photos of the orientation of the latch for reference. The new latch will need to be oriented in the same position as this old latch once installed.
- The latch is held in place to the stove with a nut and bolt. Using a wrench, loosen and remove the nut on the inside of the firebox.
 - It is recommended to spray the nut with a product like PB Blaster or WD40 and let it set for several minutes prior to removal. This will prevent damage to the nut and bolt during removal and allow the nut to turn easier.

- Remove both the bolt holding the latch in place and the old latch from the firebox frame.

4. Install New Door Handle

- Position the new latch's mounting hole onto the firebox frame.
- Secure the latch to the firebox frame using the nut and bolt removed in Step 3. Ensure the latch, nut, and both are oriented in the same positions as the old latch assembly.

5. Connect Power

- Close the door to the stove. Ensure the door is sealed when closed
- Plug the stove's power cord into the power source.
- Your new door latch is installed and ready to use.

Post-Installation Check

- Verify all connections are secure
- Test the seal of the door to ensure proper fitment. The door should be sealed tightly when both the handle is secured and the gasket is at proper thickness.
- Check for any openings in the door seal. Closing the door on a piece of paper then attempting to pull it out would be the best method; The paper should not be able to move if that place on the gasket is completely sealed. If the paper is easy to pull out,

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.

