

# 2-POSITION ROCKER SWITCH 3-20-07625

## INSTALL INSTRUCTIONS

Replaces MPNs: 3-20-7625, 812-3910

---


### Before Installing

- **ALWAYS** unplug the unit before beginning any work
  - Allow the unit to cool completely if recently used
  - Work in a well-lit area with proper tools
  - Ensure there are no pellets in the hopper assembly
- 

### Installation Steps

1. Unplug the stove.
2. Access the blower; the location may vary by model and removal of an access panel may be necessary. If your blower plugs into a power source separate from the stove, unplug and remove the blower assembly as well.
3. Locate the rocker switch.
4. Depress the locking tabs on the rocker switch from the wiring side and push the switch through the hole.
5. Disconnect the wires from the old rocker switch. Take note of the order the wires are connected.
6. Connect the wires to the new rocker switch in the same way as the old switch. (refer to the diagram if needed).
7. Push the switch into the receptacle until the tabs on the switch lock in place. Ensure that the wires to the switch and wires are oriented the same as before before inserting the switch.
8. Close up the stove; reattach any removed access panels. Reattach the fan assembly if removed from the stove.

### Diagram

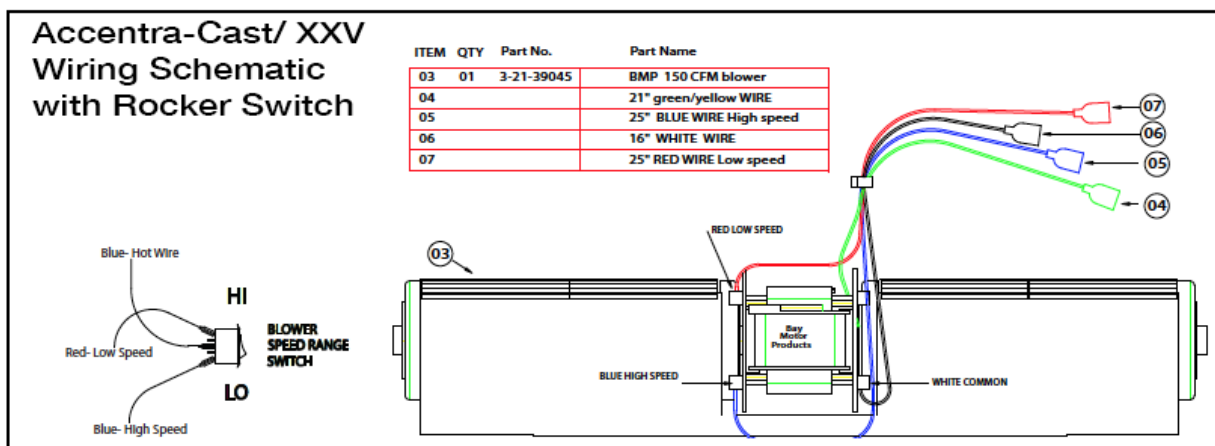

## ✓ Post-Installation Check

- Verify all connections are secure
- Ensure all wiring is not in proximity of moving parts
- Test motor operation before closing panels
- Check for any unusual noises or vibrations

## ☎ Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our [contact form](#).