

3-21-33647

Convection Blower

INSTALL INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug your stove from the power.

2. Access the unit

Remove the stove rear access panel to access the convection blower.

3. Disconnect Blower Wiring

Unplug the old blower's wiring leads from the wiring harness.

Tip: you can take a photo of the wires to note the color coding of the wires and connections before removal.

4. Remove Old Blower

- Remove the screws holding the old convection blower motor in place.
- Pull out the blower from the stove.

5. Install New Blower

- Install the replacement blower using the original mounting screws.
- Ensure the blower is oriented in the same position as the old blower.

6. Connect Blower Wiring

Plug the new blower's wiring leads into the wiring harness in the same way as the old blower.

7. Final Assembly

Install the removed rear access panel.

8. Power Connection

Plug in the stove to test.

Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.