

AGITATOR 40501

INSTALL INSTRUCTIONS

Replaces MPNs: 40501

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

Unplug the stove from power.

2. Access the Unit

- Open the firebox main door in the front of the unit to access the agitator.
- The agitator is located inside the burnpot area of the firebox.

3. Remove Old Agitator

- Remove the agitator pin from the agitator drive rod and agitator connection in the firebox.
- Slide the old agitator away from the agitator drive rod to disconnect the agitator.
- Remove the burn pot and old agitator from the stove.
- Remove the old agitator from the burn pot.

4. Install New Agitator

- Install the new agitator into the burn pot in the same position as the old agitator.

- Reinstall the burnpot and new agitator into the firebox.
- Slide the agitator into the agitator drive rod.
- Lock the agitator onto the drive rod with the agitator pin.

5. Final Assembly

Close the firebox main door.

6. Connect Power

Plug the stove into the power source to test.

Post-Installation Check

- Verify all connections are secure
- Test motor operation before closing the door
- Ensure the agitator moves properly without jamming
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.