

AGITATOR 40501

INSTALL INSTRUCTIONS

Replaces MPNs: 40501


Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
 - Ensure there are no pellets in the hopper assembly
-

Installation Steps

1. Unplug the stove. Ensure the stove is cool to the touch inside of the firebox.
2. Open the firebox main door in the front of the unit.
3. Remove the agitator pin from the agitator drive rod and agitator connection in the firebox.
4. Slide the old agitator away from the agitator drive rod.
5. Remove the burn pot and old agitator from the stove.
6. Remove the old agitator from the burn pot.
7. Install the new agitator into the burn pot in the same position as the old agitator.
8. Reinstall the burnpot and new agitator into the firebox.
9. Slide the agitator into the agitator drive rod.
10. Lock the agitator onto the drive rod with the agitator pin.
11. Plug in the stove to test the unit.

Diagram

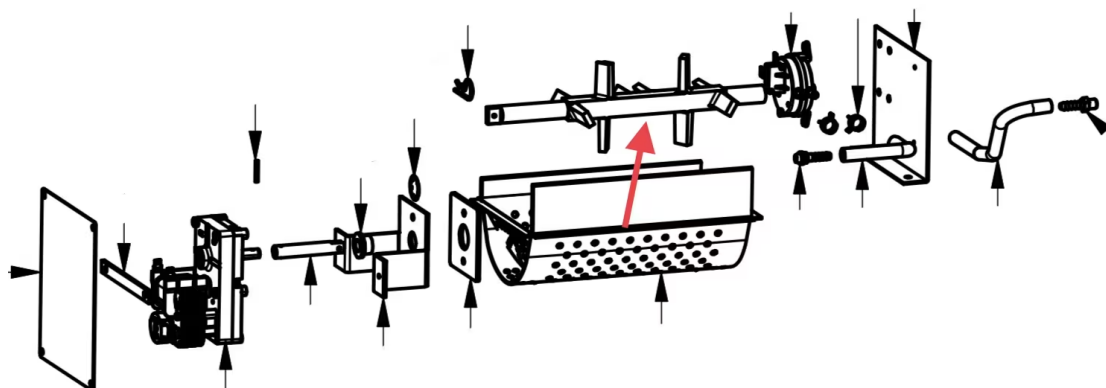

✓ Post-Installation Check

- Verify all connections are secure
- Ensure all wiring is not in proximity of moving parts
- Test motor operation before closing panels
- Check for any unusual noises or vibrations

📞 Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our [contact form](#).