

# 50-1455

## Convection Blower

### INSTALLATION INSTRUCTIONS

---

#### Before Installing

- **ALWAYS** unplug the unit before beginning any work
  - Allow the unit to cool completely if recently used
  - Work in a well-lit area with proper tools
- 

#### Installation Steps

##### 1. Power Disconnection

Unplug the unit from the power source.

##### 2. Access The unit

Open the service panel to access the convection blower.

##### 3. Disconnect Wiring

Disconnect all wires from the convection blower.

**Tip:** Take note of the location of each removed connection for later.

##### 4. Remove Old Blower

- Remove the bolts holding the blower in place.
- Remove the old blower from the stove.

##### 5. Install New Blower

- Install the new blower to the stove with the previously removed bolts.
- Ensure the blower is positioned in the same orientation as the old blower.

##### 6. Connect Wiring

Connect the new convection blower to the wiring harness.

**Tip:** The wires can be connected to either terminal, but you can use the connection locations of the previous blower as a reference.

## 7. Final assembly

Close the service panel securely.

## 8. Power Connection

Plug the stove back into the power source.

---

## Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

---

## Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.