

50-1901

Exhaust Blower (Motor Only)

INSTALL INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug your stove from the power.

2. Access the Unit

Remove the rear wiring access panel to access the exhaust blower.

3. Disconnect Blower Wiring

- Disconnect the wires connectors to the old blower motor wiring harness.
- Take note of the color of the wires that were disconnected, the wires from the wiring harness may be white and blue in most cases

Tip: you can take a photo of the wires to note the color coding of the wires and connections before removal.

4. Remove Old Blower

- Loosen the screws holding the old combustion blower motor in place on the housing
- Pull out the motor from the stove with the gasket.

5. Install New Blower

- Carefully insert and install the new blower and gasket into the blower housing.
- Tighten the loosened bolts to fasten the blower in place.

6. Connect Blower Wiring

- Reconnect the wiring harness connections to the new blower's wiring leads.
- The wires on the new blower are non polarized, so the positive/negative leads coming from the wiring harness can be connected to either wired from the new motor.

7. Final Assembly

Install the removed rear access panel.

8. Power Connection

Plug in the stove to test.

Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.