

GRILL WHEEL 6" Generic Wheel

INSTALLATION INSTRUCTIONS

Replaces MPNs: 54389, PB1000XL-001-R00, PB820PS1-003, 32185

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the grill from the power source.

2. Access the Unit

- Remove any loose parts from the grill such as grill grates or drip pans
- Carefully lay the grill on its rear panel to gain easier access to the wheels/legs. It is recommended to lay the unit on a mat to prevent damage to the grill body.
 - Ensure to remove obstructive parts such as grill grates to prevent damage to the grill.

3. Remove Old Wheel(s)

- Remove the locking cotter pin from the hole in the end of the wheels's axle pin.
- Pull the wheel with the axle pin and washer out from the leg.

5. Install New Wheel(s)

- Install the new wheel to the new axle pin, then install the washer to the pin.
- Insert the end of the axle pin into the mounting hole on the leg.
 - Ensure the wheel is oriented on the outside of the leg with the washer sitting between both the wheel and the leg. The end of the pin should be exposed through the other side of the leg.
- Insert the new locking cotter pin through the hole on the end of the axle pin to lock the assembly into place on the leg.

6. Connect Power

- Reposition the grill so it now stands on the wheels and stands upright.
- Reinstall any removed parts from step 2 to the grill.
- Plug the grill's power cord into the power source.
- Your new chimney is installed and ready to use.

Post-Installation Check

- Verify if the wheels turn and operate normally before final assembly.
- Ensure all connections are secure.

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.