

FEED MOTOR 3-20-08752-AMP

INSTALL INSTRUCTIONS

Replaces MPNs: 3-20-8752

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
 - Ensure there are no pellets in the hopper assembly
-

Installation Steps

1. Unplug your stove.
2. Ensure there are no pellets in the hopper.
3. Gain access to the rear of the stove.
4. Remove the rear access panel.
5. Loosen the white tensioner block from under the chain to create slack on the chain
6. Removing the left-side sprocket from the feed motor by loosening the 1/8" allen key screw in the hub of the drive sprocket.
7. Remove the chain
8. Remove the old auger motor from the mounting bracket.
9. Loosley install the new auger motor to the mounting bracket with screws
10. Reinstall the drive sprocket and chain assembly and connect to the auger shaft with the 7/16" set screw.
11. Reposition the auger motor until the auger motor cannot move any further into the bracket. Tighten the screws on the auger motor to fasten in place. This will cause the chain to tighten slightly.

12. Adjust the chain tensioner by tightening the tensioner bolt until the tensioner does not move and the chain is taut.
 13. Reinstall the rear access panel.
 14. Plug in the stove.
-

Post-Installation Check

- Verify all connections are secure
 - Ensure all wiring is not in proximity of moving parts
 - Test motor operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our [contact form](#).