

80495

Exhaust Blower

INSTALL INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug your unit from the power.

2. Access the unit

Remove the necessary panels from the furnace (You may need to remove the rear and side panels).

3. Disconnect Blower Wiring

- Remove or unplug the RDT temp sensor.
- Unplug the wiring harness power wires from the exhaust blower wiring leads.

Tip: you can take a photo of the wires to note the color coding of the wires and connections before removal.

4. Remove Old Blower

- Remove the screws attaching the blower housing to the unit.
- Remove the old blower from the stove.

- You may need to disconnect the exhaust pipe from the unit when removing the blower.
- Scrape and remove any pieces of old gasket stuck to the housing or body of the unit using a flathead screwdriver.
-

5. Install New Blower

- Install the new blower and gasket to the stove with the previously removed screws.
- Reconnect and seal the exhaust if it was removed.

6. Connect Blower Wiring

- Connect the RDT temp sensor and ensure the RDT is installed if removed prior.
- Plug power wires from the wiring harness into the blower wiring leads.

7. Final Assembly

Install the removed wiring access panels.

8. Power Connection

Plug in the stove to test.

Post-Installation Check

- Verify all connections are secure
 - Test blower operation before closing panels
 - Check for any unusual noises or vibrations
-

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.