

# 80573

## Exhaust Blower

### INSTALL INSTRUCTIONS

---

#### Before Installing

- **ALWAYS** unplug the unit before beginning any work
  - Allow the unit to cool completely if recently used
  - Work in a well-lit area with proper tools
- 

#### Installation Steps

##### 1. Power Disconnection

Unplug your unit from the power.

##### 2. Access the Unit

Remove the stove wiring access panel to gain access to the blower

##### 3. Disconnect Blower Wiring

Unplug the power wires from the exhaust blower wiring leads.

**Tip:** you can take a photo of the wires to note the color coding of the wires and connections before removal.

##### 4. Remove Old Blower

- Remove the screws attaching the blower housing to the unit.
- Disconnect the adapter transitioning from the old blower housing to the exhaust pipe (You may need to disconnect the exhaust pipe from the unit to do this).
- Remove the blower from the stove.

- Scrape and remove any pieces of old gasket stuck to the housing or body of the unit using a flathead screwdriver.

## 5. Install New Blower

- Position the new gasket and blower assembly in place
- Install the previously removed screws to secure the blower.
- Reconnect the adapter (If previously removed) and venting.
- Make sure the connection from the blower housing to the adapter, and the connection from the venting to the adapter collar is sealed with high-temperature silicone!

## 6. Connect Blower Wiring

Plug the power wires from the wiring harness to the new blower's wiring leads.

## 7. Final Assembly

Install the stove wiring access panel.

## 8. Power Connection

Plug in the unit to test.

---

## Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

---

## Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.

