

80602

Exhaust Blower Assembly

INSTALL INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug your stove from the power.

2. Access the Unit

Open the service panel on the side of the unit to access the exhaust blower

3. Disconnect Blower Wiring

Unplug the two wire leads running from the wiring harness to the blower motor.

Tip: you can take a photo of the wires to note the color coding of the wires and connections before removal.

4. Remove Old Blower

- Locate and remove the high-limit thermodisc from the blower housing.
- Remove the bolts holding the blower housing to the stove (If the venting is connected to the stub on the back of the blower housing it will need to be disconnected).
- Unscrew and remove the bolts holding the exhaust blower in place.

- Remove the blower and gasket from the stove (The gasket between the blower housing and stove should be replaced at this time to avoid fitment issues)

5. Install New Blower

- Position the new blower assembly and gasket in place.
- Fasten and secure the blower with the previously removed bolts.
- Connect the venting if it was disconnected (Remember to apply high-temp silicone at the connection point).
- Install the high-limit thermodisc to the blower housing with mounting screws.

6. Connect Blower Wiring

Connect the wiring harness connections to the new blower motor wiring leads in the same connections as the original blower.

7. Final Assembly

Close the stove access panel.

8. Power Connection

Plug in the stove to test.

Post-Installation Check

- Verify all connections are secure
 - Test blower operation before closing panels
 - Check for any unusual noises or vibrations
-

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.