

EXHAUST BLOWER 80602

INSTALL INSTRUCTIONS

Replaces MPNs: 80602

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
 - Ensure there are no pellets in the hopper assembly
-

Installation Steps

1. Unplug the stove.
2. Open the service panel on the side of the unit.
3. Locate and remove the high-limit thermodisc from the blower housing.
4. Remove the two wire leads running from the wiring harness to the blower motor.
5. Next, remove the bolts holding the blower housing to the stove (If the venting is connected to the stub on the back of the blower housing it will need to be disconnected).
6. Remove the blower (The gasket between the blower housing and stove should be replaced at this time).
7. Position the new blower assembly and gasket in place and reinstall the previously removed bolts.
8. Reconnect the venting if it was disconnected (Remember to apply high-temp silicone at the connection point).
9. Reinstall the high-limit thermodisc.
10. Connect the previously removed wires to the new blower motor.

11. Plug in the unit and test the motor.

Post-Installation Check

- Verify all connections are secure
 - Ensure all wiring is not in proximity of moving parts
 - Test motor operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our [contact form](#).