

# 80P20003-R

## Convection Blower

### Install Instructions

---

#### Before Installing

- **ALWAYS** unplug the unit before beginning any work
  - Allow the unit to cool completely if recently used
  - Work in a well-lit area with proper tools
- 

#### Installation Steps

##### 1. Power Disconnection

Unplug the unit from the power.

##### 2. Access the Unit

Open the wiring access panel toward the rear of the unit to access the convection blower.

##### 3. Disconnect Blower Wiring

Disconnect the wiring harness connections from the old convection blower motor wiring leads.

**Tip:** you can take a photo of the wires to note the color coding of the wires and connections before removal.

##### 4. Remove Old Blower

- Unscrew the bolts holding the convection blower in place.
- Pull the convection blower out of the stove.

## 5. Install New Blower

- Install the new convection blower motor to the stove.
- Ensure the blower is oriented in the same position as the previous blower.
- Secure the blower with screws.

## 6. Connect Blower Wiring

Connect the new convection blower wiring to the stove wiring harness using the same connection layout as the old blower.

## 7. Final Assembly

Close the wiring access panel.

## 8. Power Connection

Plug in the stove to test.

---

## Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

---

## Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.