

CONVECTION BLOWER 812-3370

INSTALL INSTRUCTIONS

Replaces MPNs: 812-3370

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
 - Ensure there are no pellets in the hopper assembly
-

Installation Steps

1. Use proper shut down procedures to shut down the appliance and let it completely cool.
2. Once confirmed to be completely shut down and cooled, disconnect the unit from power
3. Locate the convection blower at the bottom rear of the appliance. If an outside air kit is also installed, depending on your particular installation you may or may not have to remove the outside air flange. If you do, remove the 2 screws using a Phillips head screwdriver. You do not need to remove the flex pipe from the flange.
4. Remove the lower rear screen by removing the 4 screws securing the screen to the appliance.
5. The motor is mounted on a removable bracket. Remove the 2 screws just above the motor and the whole assembly will tilt down and pull out.
6. Disconnect the wires from the old blower. The wires coming from the wiring harness are white, red and tan and the wires coming from the blower are black, white and red. The white connects to white, the red to red and black to the tan color wire.

7. Reconnect the wires from the wiring harness to the new blower in the same way as the previously removed blower.
 8. Mount the new blower assembly onto the stove via the removable bracket with the 2 screws.
 9. Reattach the lower rear screen. Secure the screen in place with 4 screws. If you removed the outside air flange (if applicable) , reattach the flange with 2 screws.
 10. Reconnect the panel and plug the stove back into power.
-

Post-Installation Check

- Verify all connections are secure
 - Ensure all wiring is not in proximity of moving parts
 - Test motor operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our [contact form](#).