

A-E-033

Convection Blower

INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug the unit from the power source

2. Access the Unit

- Remove the rear access panel for easier access to the blower.
- Remove the side panel access panel which has the controller.
- You may need to remove the venting from the unit depending upon your installation

3. Disconnect Wiring

Disconnect all of the wires from the controller and set the panel aside.

Remove the wires for the blower which is located behind the control area.

4. Remove Old Blower

- Remove the blower mounting screws from the rear wall of the stove.
- Remove the old blower and gasket from the stove.

5. Install New Blower

Install your new blower with a new gasket with the previously removed screws.

6. Connect Wiring

- Connect the wiring harness to the blower.
- The blower wires are non-polarized so you can connect either wire from the blower to the connections on the wiring harness
- Reconnect the wires to the controller.

7. Final Assembly

Reattach the rear and side panels to the stove.

Reattach the venting back to the stove.

8. Power Connection

Plug the stove back into the power source.

Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.