

# England's Stove Works, Inc.

Coal, Gas, Pellet and Wood Stoves

P.O. Box 206 Monroe, VA 24574

[www.englishstoveworks.com](http://www.englishstoveworks.com)

Phone: (800) 516-3636

Fax: (434) 929-4810

## INSTALLING THE AC-13BA ROOM AIR BLOWER

**CAUTION: HOT PARTS. STOVE MUST BE OUT (NO FIRE) AND COOLED DOWN BEFORE PROCEEDING.**

**DANGER: RISK OF ELECTRICAL SHOCK. DISCONNECT POWER BEFORE INSTALLING OR SERVICING.**

**CAUTION: MOVING PARTS MAY CAUSE INJURY. ALWAYS FOLLOW LOCAL CODES.**

Installation of the AC-13BA Blower Assembly:

1. Slide the blower under the ash lip in the front of the stove. Blower will be labeled "Top" on the top side of blower.
2. When routing power cord, be sure that the cord does not come into contact with any hot surface.
3. See further information and warnings below. Follow your Owner's Manual to operate your stove.

### *Installed Blower*

Cord and Rheostat are located on Left when viewing stove from the front.



**BLOWER ASSEMBLY: MODEL AC-13BA**

**115 VOLTS, 60 Hz, 0.83 AMPS, 3060 RPM**

**DANGER: RISK OF ELECTRIC SHOCK. DISCONNECT POWER BEFORE SERVICING.**

### ***BLOWER MOTOR OPERATING INSTRUCTIONS:***

This unit is set up with a variable speed blower motor. The fan speed should be run on "Low" when the unit is operating at lower burn settings, and set to "High" for high burns. The blower will move air under, around and then exit over the top of the front of the stove.

### **BLOWER INSTALLATION:**

To install the blower, simply slide it under the ash lip in the front of the stove. The blower should be removed and cleaned at least once per year; you can use a vacuum cleaner to remove any loose dust build-up, but DO NOT disassemble the blower. The blower should not require any oil. When routing power cord, be sure that the cord does not come into contact with any hot surface.

**Technical Support:** (800) 245-6489

**Web Site:** [www.englishstoves.com](http://www.englishstoves.com)