

BURN POT BURN-POT-HP50 INSTALLATION INSTRUCTIONS

Replaces MPNs: BurnPotHP50, BP-2C, HP50S-33

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the power source.

2. Access the Unit

- Locate the burn pot on the stove. The burn pot typically sits in the front of the stove in the main burning area.
- Open the stove's main door to access the burn pot.

3. Remove Old Burn Pot

Pull the old burn pot from the burn pot cradle.

4. Install New Burn Pot

- Ensure the edges of the burn pot cradle are clean and free of any debris or ash.
- Insert the new burn pot into the burn pot cradle.
 - **Note:** Ensure the igniter port faces backward toward the igniter tube at the back of the firebox and front of the pot clears the front catch.

- Be sure the burn pot sits flush on top of the cradle. Any gaps between the burn pot and the cradle can alter airflow through the unit, which can cause the stove to burn inefficiently and create start-up issues.

5. Connect Power

- Close the stove door.
- Plug the stove's power cord into the power source.
- Your new burn pot is installed and ready to use.

Post-Installation Check

- Verify if the burn pot is sitting flush to the cradle before closing the door.
- Ensure the pellets are burning properly and not making unusual flames.
- Be careful not to touch the burn pot while operating the stove, allow the unit to cool completely before making any adjustments.

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.