

GRILL WHEEL CASTER-WHEEL INSTALLATION INSTRUCTIONS

Replaces MPNs: 54388, 54094, 74064, 1100PS1-19, RT-CASTR

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the grill from the power source.

2. Access the Unit

- Remove any loose parts from the grill such as grill grates or drip pans
- Carefully lay the grill on its rear panel to gain easier access to the wheels/legs. It is recommended to lay the unit on a mat to prevent damage to the grill body.
 - Ensure to remove obstructive parts such as grill grates to prevent damage to the grill.

3. Remove Old Wheel(s)

- With a wrench, turn the nut on the base of the wheel where the wheel threads into the leg.
- Ensure to turn the nut so the wheel threads out of the wheel mounting hole until the wheel is removed.

5. Install New Wheel(s)

- Insert the threaded stub on the new wheel into the mounting hole in the end of the leg.
- Turn the nut at the base of the threaded stub with a wrench to tighten the wheel into place on the leg.

6. Connect Power

- Reposition the grill so it now stands on the wheels and stands upright.
 - Reinstall any removed parts from step 2 to the grill.
 - Plug the grill's power cord into the power source.
 - Your new chimney is installed and ready to use.
-

Post-Installation Check

- Verify if the wheels turn and operate normally before final assembly.
 - Ensure all connections are secure.
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.