

MAIN POWER SWITCH CB MAIN SWITCH INSTALL INSTRUCTIONS

Replaces MPNs: 720227, PS-1

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
 - Ensure there are no pellets in the hopper assembly
-

Installation Steps

1. Ensure the plug is removed from the main switch.
2. Remove the side panel closest to the switch.
3. Remove the spade connectors that are attached to the rear of the switch.
(Pay special attention to the location of these wires so that they can be reconnected in the same orientation).
4. Using a small flat head screw drive compresses the plastic clips on the side of the switch. This will allow the switch to separate from the back of the stove.
5. Install the new switch.
6. Reconnect the spade connectors to the back of the switch.
7. Reinstall the side panel.
8. Plug the main power cord into the back of the new switch.

Refer to the [Guide to Switches](#) for details on the switch's location, function, and troubleshooting.

Post-Installation Check

- Verify all connections are secure
 - Ensure all wiring is not in proximity of moving parts
 - Test motor operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our [contact form](#).