

OVERHEAT SENSOR CB-OVERHEATWIRE INSTALL INSTRUCTIONS

Replaces MPNs: CB92CSensor, 92C, CB-Sensor-92C

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
 - Ensure there are no pellets in the hopper assembly
-

Installation Steps

1. Unplug the power wire from the unit.
 2. Remove the side panel closest to the motherboard.
 3. Locate the sensor.
 4. Follow the sensor wires back to the circuit board and disconnect the sensor from the board.
 5. Using a pair of pliers, grab the end of the sensor and gently pull it from its housing/sleeve.
 6. Apply some high-temperature silicone to the metal cylinder end of the sensor.
 7. Slide the new sensor into the housing/sleeve.
 8. Plug the new sensor connector into the circuit board.
 9. Reinstall the side panel and plug in the unit.
-

Post-Installation Check

- Verify all connections are secure

- Ensure all wiring is not in proximity of moving parts
 - Test motor operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our [contact form](#).