

TUBE SCRAPER ROD CB-ROD-SM INSTALLATION INSTRUCTIONS

Replaces MPNs: CB-ROD-SM

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the powersource.

2. Access the Unit

Locate the tube scraper. The tube scraper can be operated with the rod typically found in the front in the area above the door. There would be a knob to operate this rod.

3. Remove Old Scraper Rod

- Prior to removal, take note or take photos of the location where the scraper rod is inserted. This is to keep track of the correct placement of the scraper assembly
- Turn the old scraper rod and knob counter clockwise to remove it. This will unthread the rod from the internal heat tube scraper.
 - Take note of the length of the threaded area on the rod that was originally inserted. The new rod will have threads of differing lengths on each end and the threading length must match to the original rod when installed.

4. Install New Scraper Rod

- Insert the new scraper into the entrance of the rod hole in front of the stove. Ensure the correct threaded end of the rod is inserted as noted in Step 3.
- Carefully push in the rod while turning the rod clockwise little-by-little. You should feel when the rod catches into the thread of the internal scraper.
 - Once engaged, turn the rod until snug. Do not overtighten. Overtightening the rod can risk damaging the threads of either the rod or the scraper.
- Once the rod is installed, install the new knob to the scraper rod by turning the knob clockwise on the threads of the rod until snug.

5. Connect Power

- Plug the stove's power cord into the power source.
- Your new scraper rod is installed and ready to use.

Post-Installation Check

- Verify all connections are secure
- Test tube scraper operation before turning on the unit.

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.