

ASHPAN LATCH CBashPanLatch INSTALLATION INSTRUCTIONS

Replaces MPNs: AshPanLatch-HP22

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the powersource

2. Access the Unit.

Locate the ash pan, this part is typically found in front of the stove sitting underneath the burn pot area. The ash pan latches would be mounted to the outside of the stove on the left and right sides of the ash pan.

3. Remove Old Latches

- Disengage the latches from the ash pan, similar to how one would routinely clean out the ash pan.
- Remove the set screw holding each ash pan latch in place and set these aside.
- Remove the ash pan latches from the stove.

4. Install New Latches

- Position the new latches in place on the stove. Ensure the latches are oriented so the hooks would point toward the front of the stove.

- You can insert one screw removed in Step 3 part way in each latch to keep the latch in place during installation.
- Secure the latches to the stove with the screws removed in Step 3. Tighten each screw until snug, do not overtighten the screws. Overtightening the screws can risk damaging the screws or the mounting holes.

5. Connect Power

- Adjust the latch hooks until there is even pressure on each side of the ash drawer when engaged by turning the hook and the lock nut on the latch to adjust the length and tension of the latch hooks.
 - Uneven pressure on one side of the ash pan can cause a gap on the opposing side, which can negatively affect how the stove will burn.
 - Plug the stove's power cord into the power source.
 - Your new ash pan latches are installed and the stove ready to use.
-

Post-Installation Check

- Verify all connections are secure
 - Ensure the ash pan is secured with even pressure on both sides.
 - Check for any unusual flames when the stove runs, this could indicate the ash pan latches may need further adjustment if this happens
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.

