

8" Stove Vent Stack FA-260421

Replaces MPNs: 9S31214, FA-260421

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug the unit from the power source.

2. Access the Unit

- Remove any access panels or baffles to access the vent stack transition from the inside.
- Disconnect the vent stack from the stove pipe venting.
- To better access the inside vent stack from the top of the stack, you may need to consider disconnecting some of the pipe venting.

4. Remove Vent Stack

- Remove the stack tie-down brackets by loosening the screws at the center of the tie downs.
- Depending on the model, this may be easier to access from either the top of the stack or from the inside of the stove underneath the stack (take note of the orientation of the tie-down brackets before removal).
- Remove both the stack and the gasket material underneath (take note of the orientation of the stack before removal)

6. Install the new Vent Stack

- Install the new gasket to the new stack, the gasket should sit flat against the inner flange of the new stack.
- Install the new stack to the vent opening in the same orientation as the original vent stack.
- Fasten the new stack in place using the included tie-down brackets.
- Ensure that the screws in these brackets are aligned and inserted through the fixed tiedown brackets inside the unit.
- The brackets should be sitting on top of the inner flange to hold the stack in place while fastening the vent stack (This may be easier to accomplish from either the inside of the stove or from the top of the stack depending on your model).

9. Final Assembly

- Reinstall any pipes removed from the venting system (you may need to secure the pipe with silicone).
- Connect the stove pipe venting to the new stack
- Carefully reinstall any access panels or baffles removed prior.

10. Power Connection

Connect the stove to the power source with the power cord.

Post-Installation Check

- Verify all connections are tight and secure
 - Test to for any unusual smells or leaks
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.