


FBK-100 AND FBK-200 BLOWER ACCESSORY KITS

(FOR USE WITH MODELS ALTAIR (-B & -C) 40/45, ALTAIR DLX (-B & -C) 40/45, ARIES (-B, -C & -D) 33/35/40/45, ARIESCD 33/35/40/45, ATLAS 36/42, AURORA 35/40/45, COMPASS 35/45, COMPASSDLX 35/45, DRC2000 33/35/40/45, DRC3000 35/40, DRL2000 35/45, DRL3000 42/54, DRL3500 35/45, DRL6500 42/54, DRT2000 (-B & -C) 33/35/40/45, DRT3000 (-B & -C) 33/35/40/45, DRT3500 (-B & -C) 35/40/45, DRT4000 (-B) 40/45, DRT35 ST/PF, DRT40 ST/PF/CR/CL, DRT4000 (-B & -C) 40/45, DRT4200 (-B & -C) 40/45, EROS35 ST/PF, GEMINI (-B & -C) 33/35/40/45, GEMINICD 35/40, GEMINIDLX 35/40/45, LIBRA40 ST/PF/CR/CL, MADISON35/40/45, MHD40 ST/PF, ORION 32/36/42, RHAPSODY 42/54, ROCHESTER ST/PF, SIRIUS 42/54, VRT2500 36/42, VRT3100 32/36/42, VRT3500 36/42 AND VARIOUS LHP LEGACY APPLIANCES]

KIT CONTENTS

- 1 ea. Blower Assembly
- 2 ea. Velcro *
- 1 ea. Variable Speed Control (FBK-200 only)
- 1 ea. Instruction Sheet
- * *Rhapsody, Sirius, DRL6500 and DRL3000 fireplaces only*

Blower Kits		
Cat. No.	Model	Description
80L84	FBK-100	Standard Single Speed
80L85	FBK-200	Variable Speed with Wall Switch

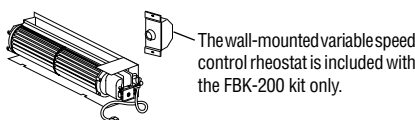

GENERAL INFORMATION

These blower kits may be used with the Innovative Hearth Products (IHP) fireplace models listed herein. The blower is installed beneath the firebox. Room air is drawn in through the bottom area of the fireplace, heated as it passes across the firebox, and discharged through the upper panel/louver area at the top of the fireplace.

FBK-100 Blower Kit

Use with wall-mounted ON/OFF blower switch or wall-mounted ON/OFF/REMOTE switch with remote control operation. Kit contains one blower, two Velcro strips, and these instructions.

FBK-200 Blower Kit

Use with wall-mounted variable speed blower control switch. Kit contains one blower, one speed control switch, two Velcro strips, and these instructions.

Refer to applicable instructions on the following pages:

- Wood-Burning Fireplaces: **Page 1**
- Direct-Vent and B-Vent Gas Fireplaces (except Linear): **Page 1**
- Rhapsody, Sirius, DRL6500 & DRL3000 Gas Fireplaces: **Page 4**
- Universal Vent-Free Fireplaces: **Page 6**

NOTE: Velcro strips are for use only when referenced herein for a specific application.

READ ALL THE STEPS BEFORE STARTING THE INSTALLATION THE FIREPLACE MUST BE OFF AND COLD BEFORE BEGINNING.

ALL WARNINGS, PRECAUTIONS AND INSTRUCTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

If any of these parts are missing or damaged, contact your dealer or IHP.us.com for referral information.

! WARNING

- **Blower accessory must be grounded. Blower comes with a three-prong, grounding plug. The plug is your protection against electrical shock. Plug it into a standard, three-hole, grounded, outlet. If cord needs replacing, use only a cord with a three-prong, grounding plug.**
- **Failure to connect all wires as indicated may cause electrical shock or personal injury.**

! WARNING

Reinstall any barrier removed before operating the fireplace. The barrier is designed to reduce the risk of burns from hot glass. Do not operate the fireplace without the barrier installed.

! CAUTION

Wear cut resistant gloves and protective clothing during this process.

! CAUTION

Verify proper operation after servicing.

WOOD, B-VENT, AND DIRECT VENT (EXCLUDING LINEAR) FIREPLACES

NOTE: In Universal Vent-Free fireplace applications, refer to the fireplace Installation Instructions for additional information.

1. **Turn OFF the fireplace and allow it to cool before proceeding.**
2. **If the appliance is connected to 120 volt power, disconnect the power.**
3. **If unit is a gas fireplace, shut OFF the gas supply to the fireplace.**
4. **Access the bottom compartment by either lowering the control compartment door or removing the facade. (some compartment doors can be completely removed by pulling the hinge pin).**

LHP Legacy Wood-burning fireplaces with a louver panel

Push the two fireplace opening screens toward the middle of the unit to expose the louver panel retaining screw at each end of the panel. Remove the retaining screws and then pull the panel from the unit.

LHP Legacy Wood-burning fireplaces with a grille

Remove the bottom grille by lifting it up near its outer support rods. It must be lifted high enough to clear the support rod retaining holes located in the cabinet bottom flange. Then pull the bottom of the grille away from the fireplace.

LHP Legacy Gas Fireplaces

Remove the bottom panel or louvers by removing the screw at each end of the panel or louvers, retain the end spacers, and then pull the panel or the louvers from the unit.

Remove the modesty panel by lifting the modesty panel by the tab on the right end, then pulling the right end of the panel away from cabinet. Pull the panel diagonally out of the corner post slots on the left side of the unit. Remove the modesty panel carefully, to make sure no wires become loose or disconnected.

LHP Merit® Legacy Gas Fireplaces

Remove the bottom panel or louvers by removing the screw at each end of the panel or louvers, retain the end spacers, and then pull the panel or the louvers from the unit.

All Other Gas Fireplaces (except Linear View Fireplaces)

Open the lower panel (clean face models) or louver assembly (louvered models) by simultaneously pushing in the left and right side of the panel or louver assembly.

5. Place the blower.

Front-Open Direct-Vent and B-Vent Gas Fireplaces

Slide the blower assembly through the front opening to the middle rear area of the cabinet base. Position the blower assembly so the tabs in the cabinet base are seated in the notches of the blower bracket. Then bend the tabs over to secure the blower assembly (*Figure 2*).

Altair DLX 40/45 and DRT4240/45 Gas Fireplaces:

1. Grasp the top of the Control Compartment door and gently pull it to release the door from the magnet. Lower door until it stops.
2. Remove the Control Compartment door by sliding the hinge pin, located at the door left side, to the right until disengages from the left corner post hole. Pull the door diagonally to the left, away from the fireplace. Place in secure place to prevent any damage.
3. Make sure the unit and gas is off. Turn shut valve off and disconnect flex line on out let side of the shut off valve (see *Figure 1*).



Figure 1 - Shutoff Valve

4. Reach in under the firebox bottom and locate the gas valve. Use Phillips screwdriver and remove the screw and ground wire that is in the middle of the valve bracket (see *Figure 3*). Once the screw is out swing the valve bracket/regulator assembly to the right.
5. Slide the blower assembly through the front opening to the middle rear area of the cabinet base. Position the blower assembly so that the tabs in the cabinet base are seated in the notches of the blower bracket. Then bend the tabs over to secure the blower assembly. Plug the blower power supply cord into the junction box.

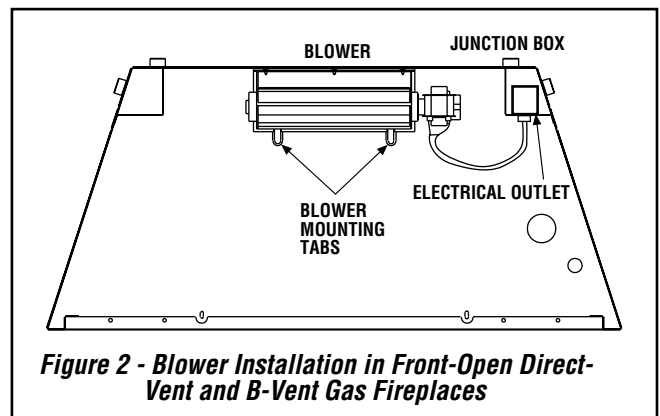


Figure 2 - Blower Installation in Front-Open Direct-Vent and B-Vent Gas Fireplaces

6. Re-attach the valve bracket/regulator assembly, by making sure that the tabs are seated in the valve bracket that is attached to the underside of the firebox bottom. Re-install screw and ground wire.

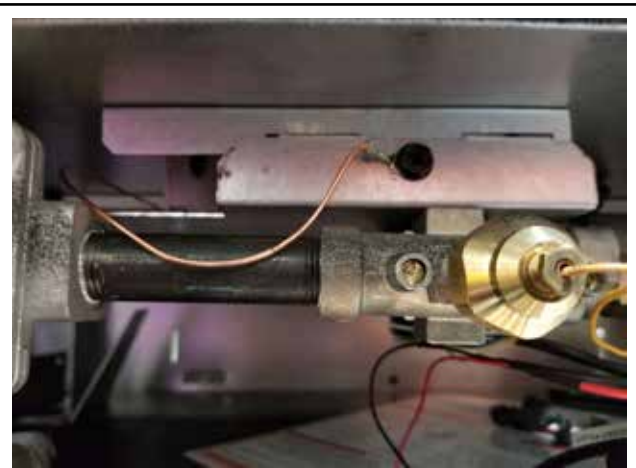


Figure 3

7. Re-connect the gas flex line. Turn gas shut off "On". Check for gas leaks, using a gas leak test solution Follow lighting instructions, attached to the bottom of the cabinet bottom.
8. Re-install the Control Compartment door.

Multi-Open Direct-Vent Gas Fireplaces

Open all remaining bottom hinged-panels. Slide the blower assembly through the closest opening to the flue side of the cabinet base. Position the blower assembly so the tabs (on the cabinet base) are seated in the notches of the blower bracket. Bend the tabs over to secure the blower assembly (*Figure 4 or 5*).

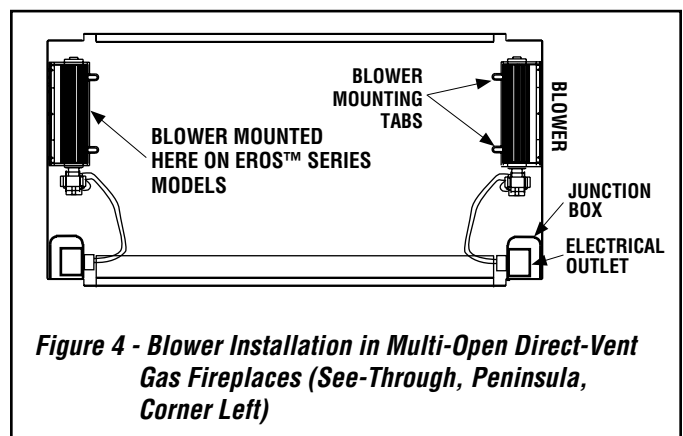


Figure 4 - Blower Installation in Multi-Open Direct-Vent Gas Fireplaces (See-Through, Peninsula, Corner Left)

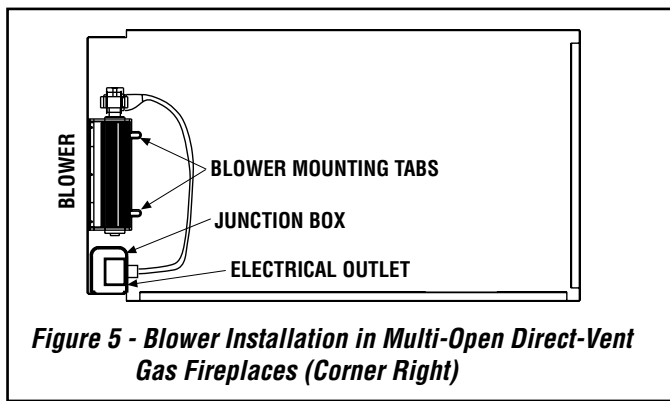


Figure 5 - Blower Installation in Multi-Open Direct-Vent Gas Fireplaces (Corner Right)

Multi-Open Vent-Free Gas Fireplaces

Open all remaining bottom hinged-panels. Remove the blower shield located across the inside right section of the unit (**Figure 6**). Refer to the fireplace Installation Instructions for additional information on shield removal. Slide the blower assembly through the closest opening to the flue side of the cabinet base. Position the blower assembly so the tabs (on the cabinet base) are seated in the notches of the blower bracket. Bend the tabs over to secure the blower assembly. Reinstall the blower shield with the blower cord routed to the electrical outlet.

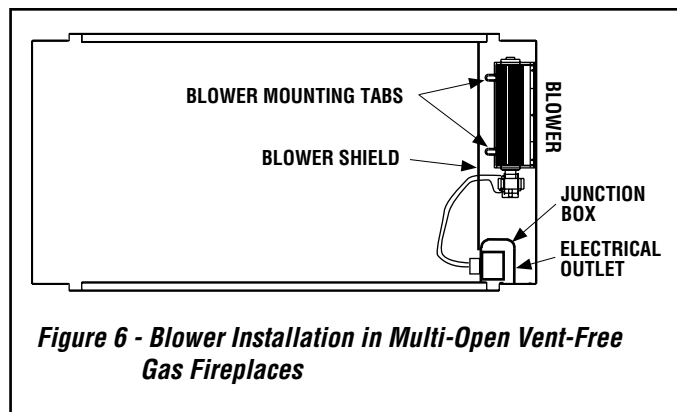


Figure 6 - Blower Installation in Multi-Open Vent-Free Gas Fireplaces

Wood-Burning Fireplaces (other than Vent-Free)

Place the two mating halves of each of the two Velcro® sections together. Peel the backing from one side of both of the mating pairs and stick the pairs to the back of the blower housing (**Figure 7**).

Wipe the inside surface of the bottom of the unit of any excess oil or debris. Peel the backing from the other side of the two mated Velcro strips.

Slide the blower assembly through the front opening of the unit (avoiding any contact between the sticky blower bottom and the cabinet). Position the blower assembly as shown in **Figure 8**, pressing firmly down on the blower to securely attach it to the base.

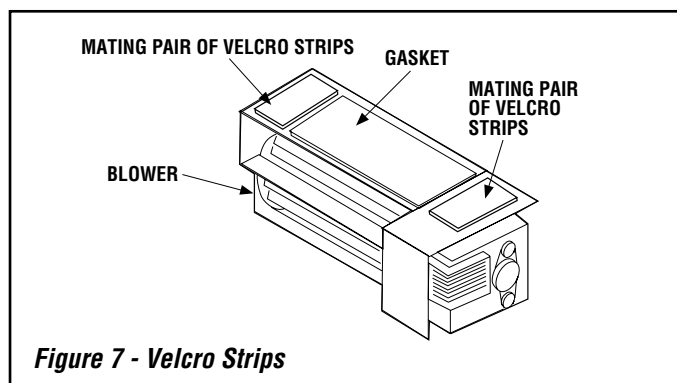


Figure 7 - Velcro Strips

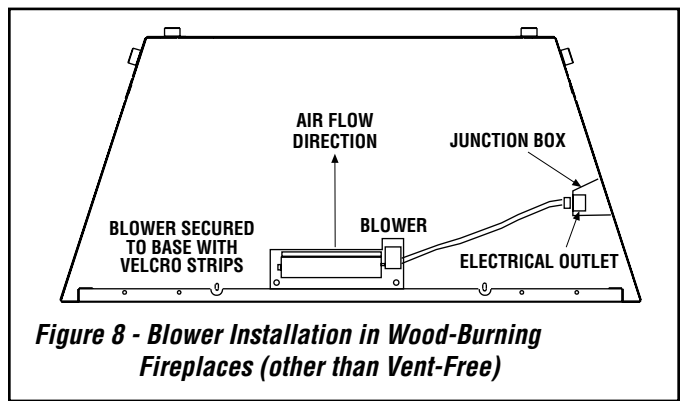


Figure 8 - Blower Installation in Wood-Burning Fireplaces (other than Vent-Free)

6. Install the controls.

FBK-100 Kits, Multi-Open Direct-Vent Gas Fireplaces

Install a field-provided ON/OFF switch in a convenient location on a wall near the fireplace.

FBK-200 Kits, Multi-Open Direct-Vent Gas Fireplaces

Install the provided variable-speed control in a convenient location on a wall, near the fireplace.

7. Route the wiring.

Multi-Open Direct-Vent Gas Fireplaces

Route a 3-wire, 120Vac power line to the ON/OFF switch (FBK-100 kits) or variable speed control (FBK-200 kits) as shown in **Figure 9**. Then route the wires to the unit's junction box. Remove the receptacle by removing the two securing screws. Connect the supply wires to the receptacle (**Figure 9**), ensuring that the polarity (as determined by the colors of the wires) is exactly as shown. Reinstall the receptacle.

8. Plug the blower cord into the top receptacle.

9. Reinstall the modesty panel (if applicable).

Elite-2 Series Gas Fireplaces

Reinstall the modesty panel carefully, so that none of the wires become loose or disconnected.

10. Reinstall the bottom panel, louver assembly, bottom louver panel, or grille.

11. Restore electrical power to the fireplace.

12. Start the fireplace by following the procedure indicated in the lighting instructions section of the Care and Operation Instructions manual supplied with the fireplace.

13. Confirm blower operation (startup, shutdown, variable speed [if applicable], and running).

J-BOX WIRING DIAGRAMS

⚠ CAUTION

Ground lead must be connected to the green screw located on the junction box. Failure to do so will prevent the appliance from operating. The appliance must be electrically grounded in accordance with local codes or, in the absence of local codes, the National Electrical Code, ANSI/NFPA 70—latest edition (In Canada, the current CSA C22.1 Canadian Electrical Code).

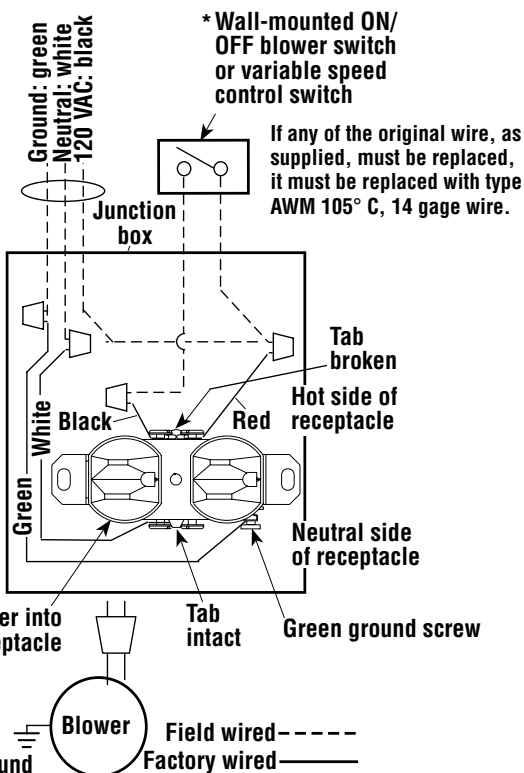


Figure 9 - 120 V, 60 Hz, 1 PH Blower Control Circuit Wiring (Direct Vent Appliances)

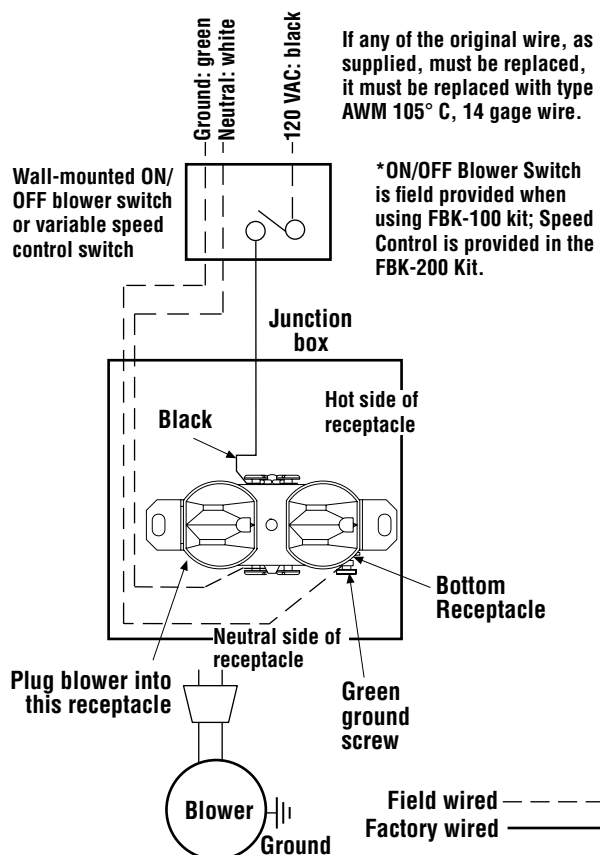


Figure 10 - 120 V, 60 Hz, 1 PH Blower Control Circuit Wiring (Wood and B-Vent Appliances)

RHAPSODY, SIRIUS, DRL6500 & DRL3000 SERIES DIRECT-VENT FIREPLACES

1. Shut OFF the gas supply to the appliance.
2. Disconnect the power supply at the circuit breaker.
NOTE: Make sure the appliance is COLD before starting installation.
3. Remove the glass door by removing the three (3) screws securing the lower edge of the door to the fireplace (**Figure 11**). Grasp the door assembly by the side edges, swing out the lower edge, and then lift up to unhook it from the fireplace, taking care not to damage the glass. Set aside screws and door assembly in a secure location for later reinstallation.
4. Remove the media.
NOTE: Glass media can be removed using a clean, dry, empty shop vac. For all other types of media, follow the instructions provided with the Media Kit.
5. Remove the fireplace floor, by removing the six (6) 5/16" screws securing it.
6. Remove the burner assembly with attached air shutter assembly, by removing the two (2) 5/16" screws securing the burner to the burner brackets (**Figure 12**). Carefully slide the burner to the left, to clear the venturi from the orifice (**Figure 13**). Rotate the burner to release the air shutter adjustment rod from the air shutter lever (**Figure 13**). Set aside the screws and burner assembly in a secure location for later reinstallation.
7. Remove the control compartment access door and gasket (**Figure 12**), by removing the twelve (12) screws. Set the door and screws aside for later reinstallation.
8. Position the blower assembly so the tabs (on the cabinet base) are seated in the notches of the blower bracket. Bend the tabs over to secure the blower assembly. Reinstall the blower shield with the blower cord routed to the electrical outlet.
9. Route a 3-wire, 120 Vac power line to the ON/OFF switch (FBK-100 kits) or variable speed control (FBK-200 kits) as shown in **Figure 9**. Then route the wires to the fireplace junction box. Remove the receptacle by removing the two (2) securing screws. Connect the supply wires to the receptacle (**Figure 9**), ensuring that the polarity (as determined by the colors of the wires) is exactly as shown. Reinstall the receptacle.
10. Plug the blower cord into the switched (black wire) receptacle (**Figure 9**).
11. Confirm blower operation (startup, shutdown, variable speed [if applicable], and running).
12. Replace all removed components, as applicable (control compartment access door and gasket, burner assembly with attached air shutter assembly, media, glass door, and modesty panel).



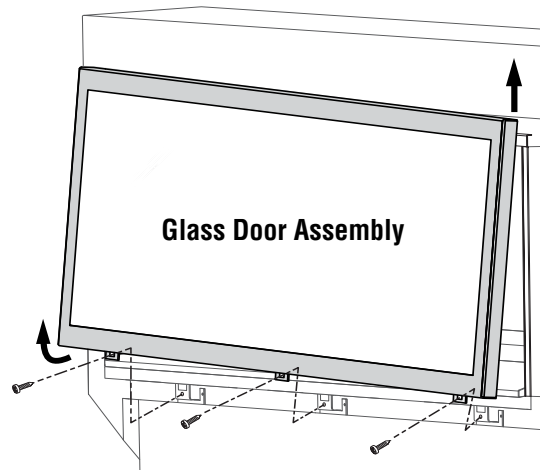


Figure 11 - Removing the Glass Door

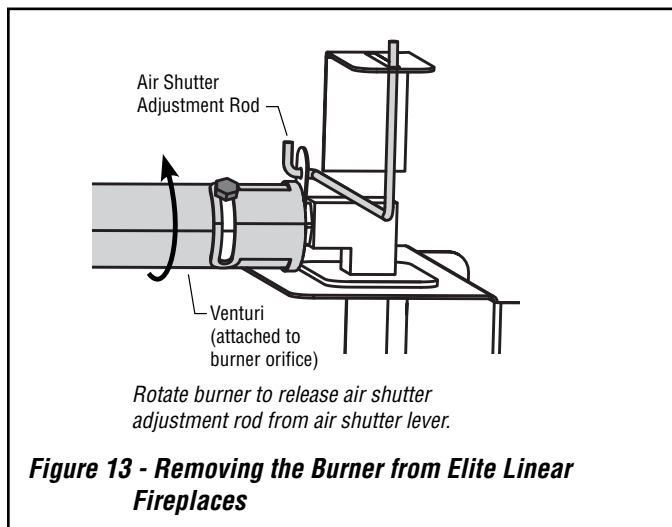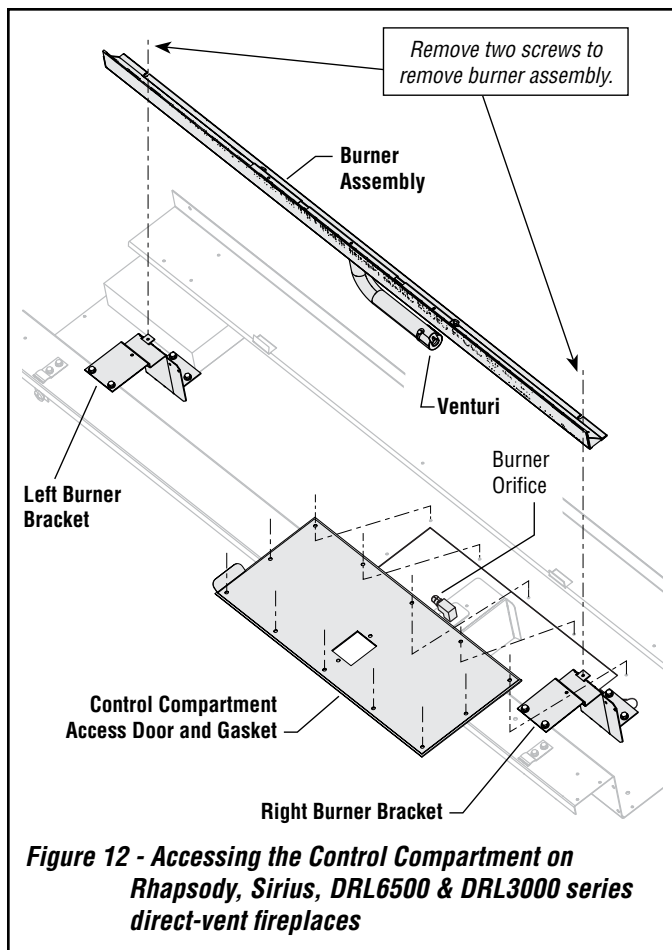


COMPASS, COMPASSDLX, DRL2000 & DRL3500 SERIES FIREPLACES

- A. If unit is not installed: locate the access panel of left hand side of unit and remove (2 screws) or remove the barrier assembly and remove the front lower access panel (2 screws).
- B. If unit is installed with optional facade, remove facade and follow Step A. If unit is installed with finishing material that do not allow for front lower access panel to be removed, follow steps below after unit is completely cooled.
 1. Remove barrier assembly and glass door.
 2. Remove all media and perforated glass media tray.
 3. Remove burner (one screw) and pilot.
 4. Remove pan that is inset into floor being careful not to damage gasket.
 5. Blower access is now possible.
 6. Once complete, reassemble unit using the reverse of the steps above.

C. Install Blower

Slide the blower assembly through the front / or side opening to the middle rear area of the cabinet base. Position the blower assembly so the tabs in the cabinet base are seated in the notches of the blower bracket. Then bend the tabs over to secure the blower assembly (**Figure 14**).

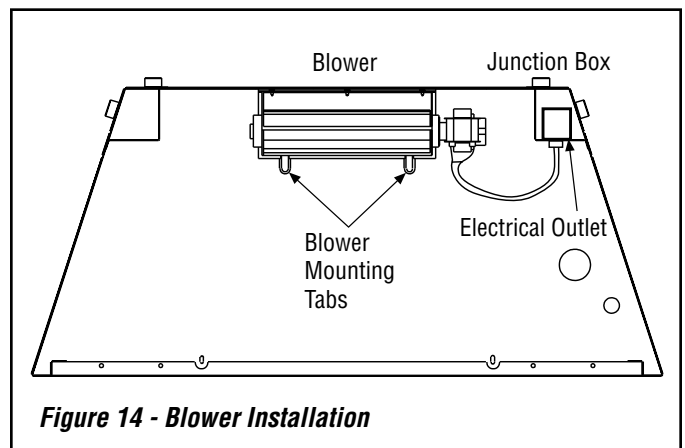


UNIVERSAL VENT-FREE FIREBOXES

- Blower Kit FBK-100 or FBK-200
- Junction Box Kit JBK (provided with appliance)


1. Access the bottom compartment.

Models With Bottom Refractory Panel:

Lift out the bottom firebox liner panel (*Figure 15*).


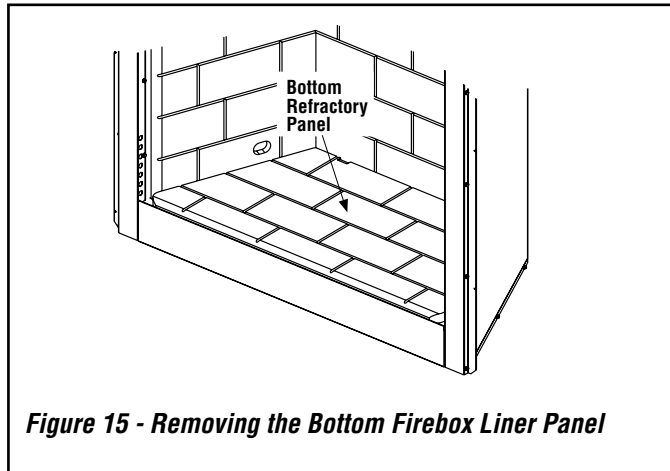


Using a screwdriver, remove the screw from the blower access panel (*Figure 16*). Slide the panel to the right until the flange clears the opening. Remove the panel and set aside.

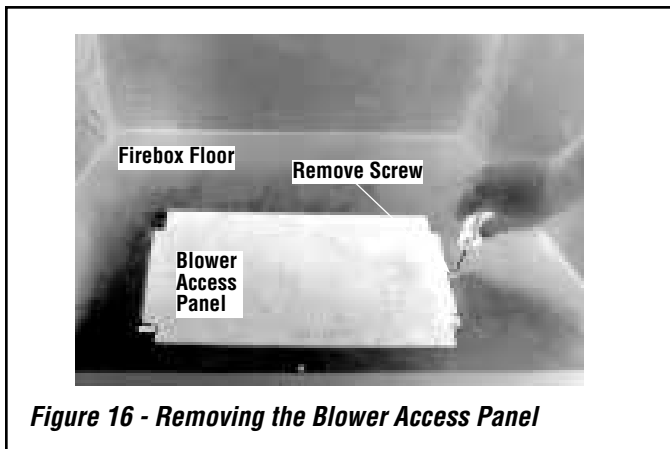


2. Remove the rectangular junction box knock-out on the right side of the unit. Install the junction box and electrical outlet below the firebox floor into the rectangular opening on the right side cabinet panel (with the removed knock-out) (*Figure 17 and 18*).



NOTE: Pass the wires through the hole, then squeeze the junction box flanges together to fit into opening.

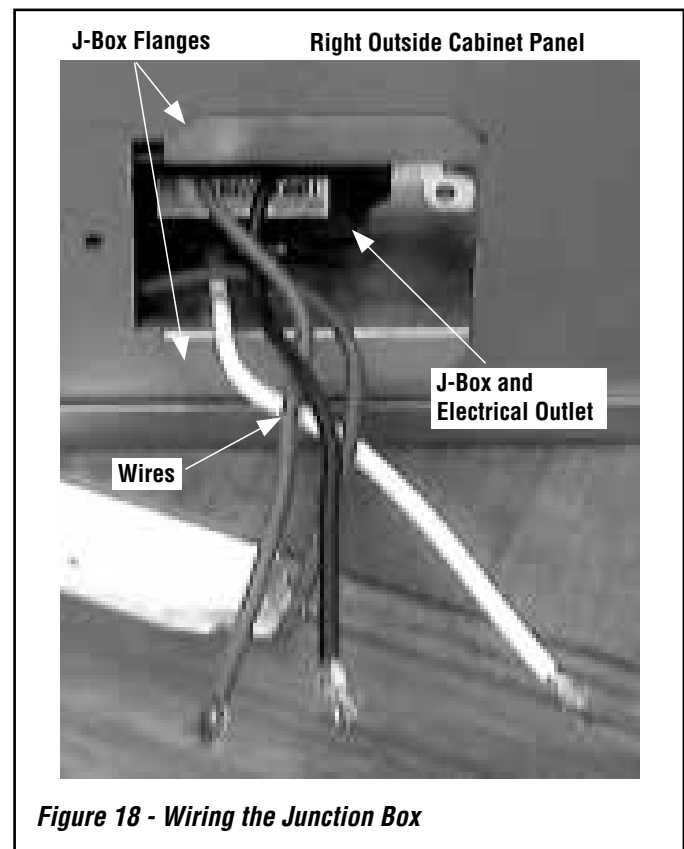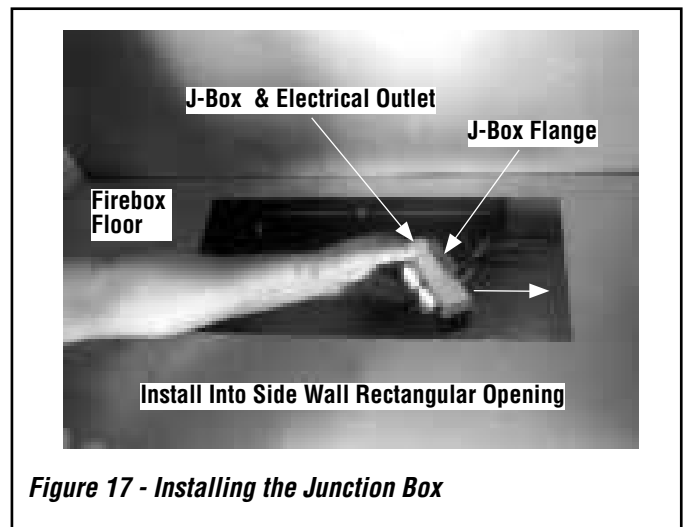

3. Loosely tie a knot in the power cord to take up slack (**Figure 19**).

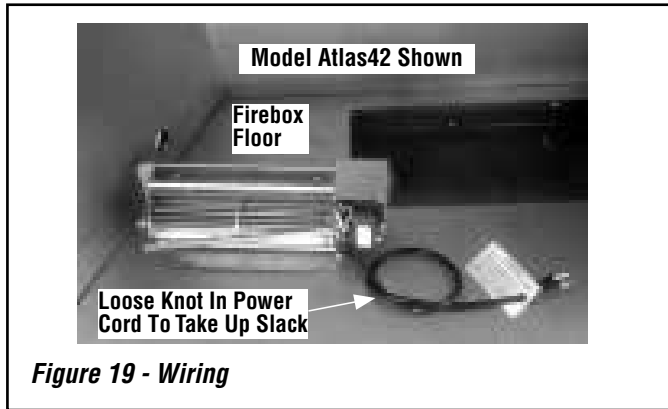

4. Locate the tabs (**Figure 20**). Position the blower assembly so that the tabs (located on the cabinet base) are seated in the notches of the blower bracket. Bend the tabs over to secure the blower assembly (**Figure 21**).

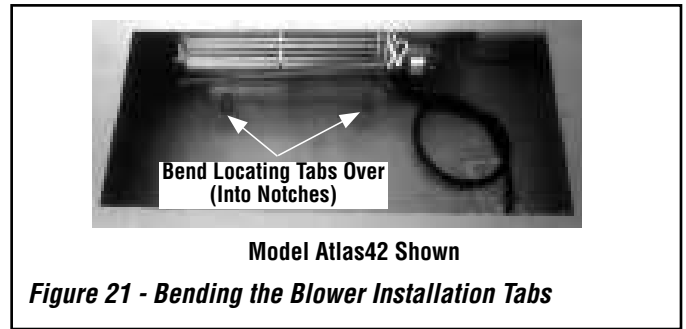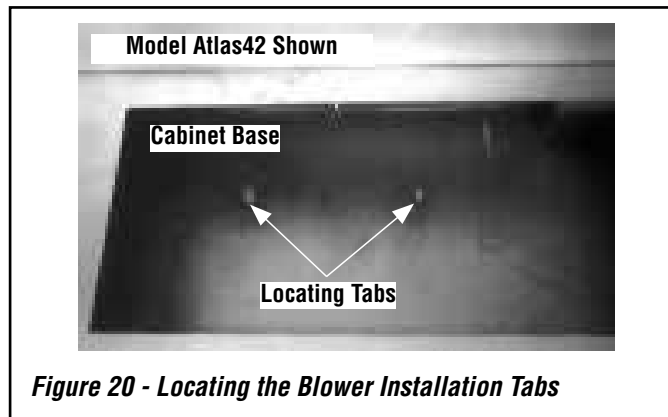

5. Plug blower power cord into the junction box electrical outlet.
6. Connect the electrical outlet and switch wires to the power supply; 3-wire, 120 VAC, 60 Hz, 1 ph power supply (**Figure 10**).

FBK-100 Kits

Install a field-provided ON/OFF wall switch (or P/N 85L87) in a convenient location on a wall, near the fireplace.

FBK-200 Kits

Install the provided variable speed control (rheostat) in a convenient location on a wall, near the fireplace.

Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and the discontinuance of colors, styles and products. Consult your local distributor for fireplace code information.



Printed in U.S.A. © 2000 Innovative Hearth Products