

CONTROL FUSE FUSE-2

INSTALL INSTRUCTIONS

Replaces MPNs: PP-996, PU-CBF, 12055908, PP3406

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the powersource.

2. Access the Unit

- Remove the screws securing the wiring access panel to the stove. On some models, you may need to remove the control board or access a holder in line with certain components in the wiring harness like the igniter to access the fuse.
- Carefully remove the access panel and set it aside.

3. Remove Old Fuse

- Before disconnecting anything, take clear photos of all wiring connections from multiple angles. This is the single best way to avoid mistakes during reassembly in case disconnection is required to access the fuse.
- Carefully remove the old fuse from the fuse holder. The fuse holder may be attached to the back of the controller or in the wiring harness on the red wires in some models.

4. Install New Fuse

Carefully Insert the new fuse into the fuse holder. Ensure not to use too much force during installation, or you may risk damaging the fuse or the holder.

5. Power Connection

- Reinstall the controller and wiring harness to the stove if removed in Step 2.
 - Secure the removed access panel with screws removed in Step 2
 - Plug the stove into the power source.
 - Your new fuse is now installed and ready to use
-

Post-Installation Check

- Verify all connections are secure
 - Test sensor operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.