

GRILL CHIMNEY PG CHIMNEY AND CAP INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the grill from the power source.

2. Access the Unit

- Locate the chimney on the grill. The chimney is typically mounted on the outside of the grill's main cooking barrel toward the top of the unit. Some models will have this mounted on the side or rear wall of the unit.
- Some units may not have a chimney preinstalled to the unit, but may also have a location for the chimney to mount. This opening may have a removable cover, proceed to remove this cover and proceed to Step 4.

3. Remove Old Chimney

- Remove the mounting bolts holding the old chimney in place.
- Remove the old chimney and gasket from the grillbody.

5. Install New Chimney

- Position the new mounting gasket and chimney onto the grill barrel. Ensure the gasket sits under the flange and the chimney opening is pointed upright.
- Secure the chimney with the included washes, lock washers and bolts respectively.
- On the Chimney cap, adjust the nut on the threaded stud to adjust the height of the cap when installed to the chimney.
- Insert the chimney cap into the mounting bracket of the chimney and turn clockwise until it touches the nut.

6. Connect Power

- Plug the grill's power cord into the power source.
 - Your new chimney is installed and ready to use.
-

Post-Installation Check

- Verify the chimney sits flush against the grill before final assembly
 - Ensure the connections are secure.
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.