

BURN POT PU-BP02A

INSTALLATION INSTRUCTIONS

Replaces MPNs: PU-BP02A, SE36994

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the power source.

2. Access the Unit

- Locate the burn pot on the stove. The burn pot typically sits in the front of the stove along the back wall of the main burning area.
- Open the stove's main door to access the burn pot.

3. Remove Old Burn Pot

- Remove the wear plate from the burn pot
- Using a 1/2" socket wrench, loosen the two hex screws located under the ash lip, beneath the front door of the stove.
- Wiggle the burnpot free from the back wall of the stove and remove it
- Pull the old burn pot and gasket out of the stove.

4. Install New Burn Pot

- Insert the new burn pot and mounting gasket in the stove. Ensure the burn pot is oriented the same position as the old burn pot and sits flush with the mount.
- Secure the burn pot by tightening the hex screws back up against the burnpot until they connect with the surface. Proceed then to turn each screw a full turn, alternating between left and right, until both screws are tight.
- Insert the wear plate into the burn pot in the same position as before.

5. Connect Power

- Close the stove door.
 - Plug the stove's power cord into the power source.
 - Your new burn pot is installed and ready to use.
-

Post-Installation Check

- Verify if the burn pot is sitting flush to the cradle before closing the door.
 - Ensure the pellets are burning properly and not making unusual flames.
 - Be careful not to touch the burn pot while operating the stove, allow the unit to cool completely before making any adjustments.
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.