

PZRP.RT57020060

Convection Fan

INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug the unit from the power source.

2. Access the unit

Open the side access panel(s) to access the blower.

3. Disconnect Wiring

Disconnect all wiring from the blower.

4. Remove Old Blower

Unscrew the bolts in place and remove the blower.

5. Install New Blower

Install the new blower in the same orientation as the old blower with bolts.

6. Connect Wiring

Reconnect all previously disconnected wires to the blower wiring terminals.

Tip: The blower wiring terminals are non-polarised, so it does not matter which terminal the wires are connected to on the blower.

7. Final Assembly

Close the side access panel(s).

8. Power Connection

Plug the stove back into the power source.

Post-Installation Check

- Verify all connections are secure
 - Test blower operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.