



**Pellet Stoves
Wood Stoves
Multi-Fuel Stoves
Pellet Grills**

P.O. Box 206

Monroe, VA 24574

www.heatredefined.com

Phone: (800) 516-3636

Fax: (434) 929-4810

Ash Pan Gasket Replacement

***WARNING: BE SURE TO READ YOUR OWNER'S MANUAL BEFORE INSTALLING OR OPERATING YOUR STOVE.
ALWAYS FOLLOW ALL CODES.***

Be sure the stove is unplugged and cooled before performing any maintenance/component replacement.

NOTE: These instructions are also included on the service DVD that came with your unit.

An airtight seal around the gaskets is crucial to proper stove performance and safety. The ash pan gasket should be replaced when it starts to fray or no longer forms a good seal with the stove.

Remove the ash pan from the stove. Take note of how the factory-installed gasket is cut and routed around the ash pan. Remove the old gasket and clean off any leftover adhesive. Then, remove the paper from the back of the new 'tape' gasket and, starting at the corner, go across the ash pan, placing the new gasket where the old gasket was, being sure to butt the ends to make a complete seal. Using scissors, cut the gasket at the corners, and cut any excess from the edges so that you cannot see the gasket after the ash pan is reinstalled in the stove.



The gasket may come in either of these types. Installation is the same in either case. See your owner's manual and service DVD for your specific part number and for more information on checking and replacing gaskets.

Call Technical Support at (800) 245-6489 with any questions.