

OUTSIDE AIR CAP S.FAPLATE3 INSTALLATION INSTRUCTIONS

Replaces MPNs: S.FAPLATE3, FAPLATE3

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the powersource.

2. Access the Unit

Locate the outside air pipe on the stove. The outside air pipe would be a flex pipe typically mounted to the rear of the unit, this cap would be interconnected between the stove and the pipe.

3. Remove Old Air Cap

- Disconnect the flex pipe from the end of the air cap and set it aside.
- With a screwdriver, remove the screws holding the air cap to the stove.
- Gently pull the old air cap off of the stove.

4. Install New Air Cap

- Position the new air cap onto the mounting location and ensure the new cap is oriented in the same position as the old cap.

- Secure the air cap using the screws removed in Step 4. Tighten until snug, do not overtighten, as excessive force can strip the bolt holes.
- Connect the flex hose to the air cap's 3 inch hose receptacle.

5. Connect Power

- Plug the stove's power cord into the power source.
 - Your new outside air cap is installed and the stove ready to use.
-

Post-Installation Check

- Verify all connections are secure
 - Ensure there are no leaks or blockages in the flex pipe before installation
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.