

# SE44039

## Exhaust Blower

### INSTALLATION INSTRUCTIONS

---

#### Before Installing

- **ALWAYS** unplug the unit before beginning any work
  - Allow the unit to cool completely if recently used
  - Work in a well-lit area with proper tools
- 

#### Installation Steps

##### 1. Power Disconnection

Unplug the unit from the power source.

##### 2. Access the Unit

Open the service panel to access the blower.

##### 3. Disconnect Wiring

Disconnect the blower wires from the wiring harness.

**Tip:** Take a photo of wire connections before disconnecting

##### 4. Remove Old Blower

- Remove the bolts on the exhaust/combustion blower.
- Uninstall both the blower and blower gaskets.

##### 5. Install New Blower

Install the new blower and gaskets with the previously removed bolts.

**Tip:** Ensure the exhaust blower is oriented in the same way as the original blower.

## 6. Connect Blower Wiring

Connect the wires from the new blower to the wiring harness.

**Tip:** Both blower wires are not polarized, so the positive/negative wire leads from the wiring harness can be connected to either of the blower wires.

## 7. Final Assembly

Close the service panel securely.

## 8. Power Connection

Plug in the stove back to the power source.

---

## Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

---

## Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.