

SE44193

Exhaust Blower

INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug the unit from the power source and ensure it has cooled completely.

2. Access the Unit

Open the rear access panel to access the exhaust blower.

3. Disconnect Blower Wiring

Disconnect the blower wire molex from the wiring harness.

4. Remove Old Blower

- Remove the mounting bolts on the exhaust/combustion blower.
- Uninstall both the blower and blower gasket.

5. Install New Blower

- Install the new blower and gasket with the previously removed bolts.
- Ensure the exhaust blower is oriented in the same way as the original blower.

6. Connect Blower Wiring

Connect the wire from the new blower to the wiring harness..

7. Final Assembly

Close the rear access panel.

8. Power Connection

Plug the stove back into the power source.

Post-Installation Check

- Verify all connections are secure
 - Test blower operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.