

SE62293

Exhaust Fan Assembly

INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug the unit from the power source.

2. Access the Unit

Remove the rear access panel to access the blower.

3. Disconnect Wiring

Disconnect the exhaust blower from the wiring harness.

4. Remove Old Blower

- Remove the bolts on the exhaust blower.
- Uninstall both the blower and blower gasket.

5. Install New Blower

- Carefully Install the new blower and gasket with the previously removed bolts.
- Ensure the exhaust blower is oriented in the same way as the original blower.

6. Connect Wiring

Connect the new blower to the wiring harness.

Tip: The wires can connect to either terminal, it does not matter which wire connects to what terminal on this blower.

7. Final Assembly

Close the rear access panel securely.

8. Power Connection

Plug the stove back into the power source.

Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.