

SP4L-160

Exhaust Blower

INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Unplug the unit from the power source.

2. Access the Unit

Open the service panel to access the exhaust blower.

3. Locate Exhaust Blower

- Locate the exhaust blower within the unit
- **Important for Breckwell Insert:** If you have a Breckwell Insert, you will need to remove the entire off-set assembly from the blower assembly and attach it to the new assembly if you have a hub-less motor

4. Disconnect Wiring

- Disconnect all wiring from the blower
- **Tip:** Take a photo of wire connections before disconnecting

5. Remove Old Blower

- Unscrew and remove the blower from the unit

- **Note:** If your unit has the original OEM blower, you may have to remove the entire blower assembly if the motor cannot be removed from the hub. This will also involve removing the vent from the end of the assembly

6. Install New Blower Assembly

- Replace blower assembly along with any gaskets that were disturbed
- **Important:** If the venting adapter was removed, make sure to apply RTV silicone to the venting adapter and secure it with a single self tapping screw

7. Reconnect Venting

Reconnect venting if it was disconnected during removal.

8. Connect Wiring

Reattach the wiring to the new blower in the same way it was removed.

9. Final Assembly

Close the service panel securely.

10. Power Connection

Plug the stove back into the power source.

Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.

