

# SP4L-80473

## Exhaust Blower

### INSTALLATION INSTRUCTIONS

---

#### Before Installing

- **ALWAYS** unplug the unit before beginning any work
  - Allow the unit to cool completely if recently used
  - Work in a well-lit area with proper tools
- 

#### Installation Steps

##### 1. Power Disconnection

Unplug the unit from the power source and ensure it has cooled completely.

##### 2. Access the Unit

Open the service panel to access the exhaust blower assembly.

##### 3. Disconnect Wiring

Carefully disconnect all wiring from the exhaust blower

**Tip:** Take a photo of wire connections before disconnecting

##### 4. Remove Old Blower

- Remove the screw holding the assembly in place and remove the entire exhaust blower assembly. This will also involve removing the vent from the end of the assembly.
- If you have a Breckwell Insert, you will need to remove the entire off-set assembly from the blower assembly and attach it to the new assembly if you have a hub-less motor.

##### 5. Install New Blower

Replace the blower assembly along with the disturbed exhaust blower gasket part 88100 (NOT included).

## 6. Connect Blower Wiring

Connect the wiring to the blower to the corresponding wires on the wiring harness.

## 7. Final Assembly

- Reconnect venting if it was disconnected.
- Make sure to apply RTV silicone to the venting adapter and secure it with a single self tapping screw.
- Close the service panel.

## 8. Power Connection

Plug the stove back into the power source.

---

## Post-Installation Check

- Verify all connections are secure
  - Test blower operation before closing panels
  - Check for any unusual noises or vibrations
- 

## Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.