

CONVECTION BLOWER SRV7000-108

INSTALLATION INSTRUCTIONS

Replaces MPNs: SRV7000-108, 7000-599, SRV7000-758

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Disconnect Power

- Ensure the unit is completely cooled down and drained of power.
- Unplug the stove from the power source.

2. Access the Unit

- Locate the convection blower in the stove. The blower motor is typically mounted on the inside of the stove toward the bottom rear of the unit.
- Carefully remove the wiring access panel on the unit by removing the screws and setting them aside to access the motor.

3. Disconnect Wiring

- Before disconnecting anything, take clear photos of all wiring connections from multiple angles. This is the single best way to avoid mistakes during reassembly.
- Label each connector with masking tape and a marker as you remove it.
- Unplug all blower wiring leads from the wiring harness.

- **Note:** Always pull on the connector body, never on the wires themselves, pulling on wires can damage the connector or break the crimp.

4. Remove Old Blower Motor

- Remove the screws holding the blower motor to the stove mount and set them aside.
- Gently pull the old blower from the mount.

5. Install New Blower Motor

- Position the new blower motor and mounting gasket onto the mounting location and ensure the new blower is oriented in the same position as the old blower.
- Secure the bower using the removed in Step 4. Tighten until snug, do not overtighten, as excessive force can strip or damage the screws.

6. Connect Wiring

- Using the reference photos and labels from Step 3, plug all new blower wire leads into the wiring harness.
 - The blower should connect to the wiring harness using the wire leads of the corresponding color (black and white).
- Ensure each connector is fully seated, you should feel or hear it click into place. A loose connection is the most common cause of post-installation issues.

7. Connect Power

- Replace the wiring access panel and secure it with the screws removed in Step 2.
- Plug the stove's power cord into the power source.
- Your new blower is installed and ready to use.

Post-Installation Check

- Verify all connections are secure
 - Test motor operation before closing panels
 - Check for any unusual noises or vibrations
-

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.