

CONVECTION BLOWER SRV7000-260

INSTALL INSTRUCTIONS

Replaces MPNs: SRV7000-260, SRV7034-058

How to install

1. Ensure the stove is completely shut down and cooled off, and then disconnect the unit from power.
2. Before attempting to do any work in the mechanical area, locate the two thermocouple inputs on the motherboard and disconnect each of them from the pin connection.
 - This is a smart way to prevent any collateral damage to the pin connections while performing work in the mechanical area. **Because the thermocouple wires are solid cores, the small pins where they connect to the PCB can accidentally break off if the thermocouple wires are bumped or pulled on while trying to get at the blower.**
3. Remove the stove side panels to access the mechanical area.
4. Reach behind the blower and release the latch by pushing the top of the trigger latch towards the blower (Some older models will have a latch pin that needs to be pulled out when doing this).
5. Rock the top of the blower slightly and lift up and out. It is recommended to pass the blower around the control board and out the side of the appliance when removing the blower.
6. Disconnect the wire harness from the bottom of the blower by depressing the tabs on the sides of the connector and then pulling to remove the blower connections.
7. Re-connect wire harness to the new blower.
8. Install the blower by placing the bottom flange into the opening first, and then rotate the blower up into position. When the blower is properly positioned the latch will engage the notch to hold the blower in place.
9. Reattach the stove side panels to close off the mechanical area.

10. Reconnect the two thermocouple pin connections back to the inputs on the control board.
11. Reconnect the stove to power.