


MT VERNON-AE TROUBLE SHOOTING MANUAL

POWER SUPPLY TROUBLE-SHOOTING

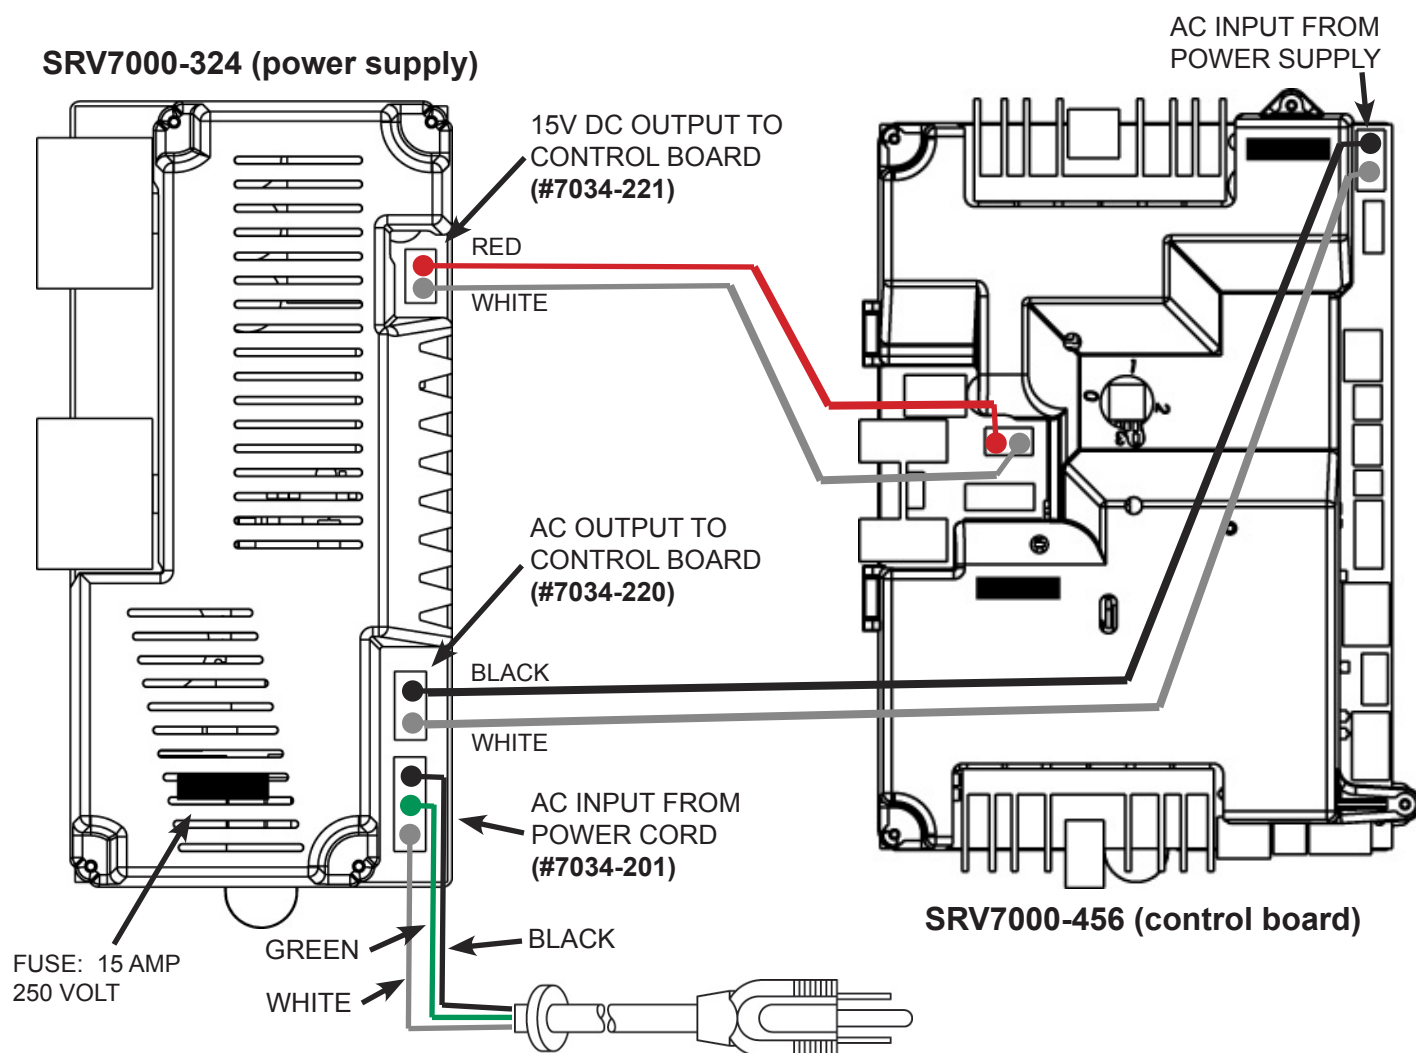

Items to check:

Check the AC power supply harness (#7034-201):

- *Check for power or a broken connection.

Check the DC power supply harness (#7034-221):

- *Check for a broken connection or for DC volts. (14 to 15 volts)
- *Check polarity. Make sure the wires are not backwards on the harness.
- *Replace the 15 amp fuse or power supply if there are not any volts.

If unit is making a “chirping” noise & wall control is blank:

- *Check the harness for a “short” in one of the wires.
- *Unplug wires from the control board until the noise goes away. Start with the door/hopper sensor harness first.