

COMBUSTION BLOWER SRV7000-588M

INSTALL INSTRUCTIONS

Replaces MPNs: SRV7034-033, SRV7000-588M, 7000-588, 7034-033

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
 - Ensure there are no pellets in the hopper assembly
-

Installation Steps

1. Shutdown the stove and then unplug it from power.
2. Remove the left and right side access panels from the stove.
3. Remove the combustion blower motor from the housing by loosening the 6 9mm (11/32) hex nuts. It is not necessary or recommended to remove the housing to replace or service the combustion blower.
4. Disconnect the wire from the control board connection points #1 and #8.
5. Install the new combustion blower motor. Replace the gasket between the housing and motor if the gasket is damaged.
 - **NOTE:** The replacement combustion motor hub for the AE units changed from 6 off-set threaded posts attached to the housing to 6 phillip-head screws for the newer style blowers. If you originally have an old style blower housing, remove the 6 off-set screws and nuts attached to the old blower to mount the replacement motor to the old style housing.
6. Reconnect the power and hall sensors to control board inputs #1 and #8.
7. Reattach the left and right side access panels to the stove.
8. Plug the stove into the power source.

Post-Installation Check

- Verify all connections are secure
- Ensure all wiring is not in proximity of moving parts
- Test motor operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our [contact form](#).