


MT VERNON-AE TROUBLE SHOOTING MANUAL

5. Removing the Combustion (Exhaust) Blower

- The combustion blower is mounted in the bottom right rear of the appliance. **Figure 5.**
- Use an 11/32 nut driver to loosen all six nuts, but do not remove. Rotate the blower and remove from the housing. **Figure 6.**
- Set the blower on the top of the housing for the stove and place on the firebox floor for the insert. You do not need to disconnect the wires. **Figure 7.**
- Vacuum out the exhaust area. **Figure 8.**
- A view of the inside of the exhaust area. **Figure 9.**

BLOWER LOCATION ON STOVE

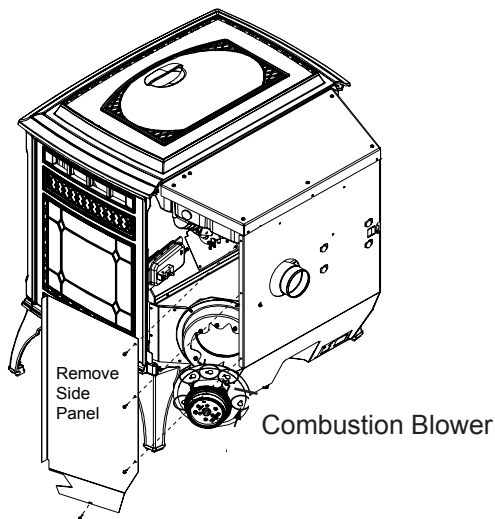

BLOWER LOCATION ON INSERT

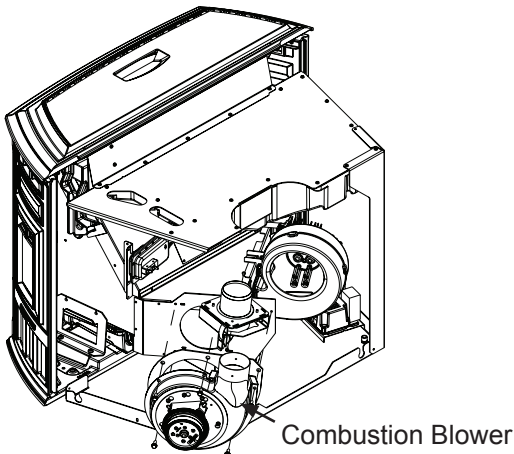


Figure 5



Figure 6

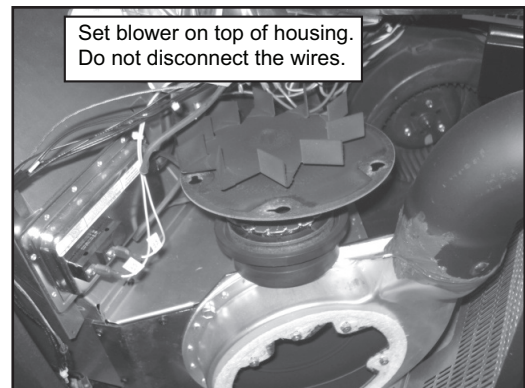


Figure 7 - Stove is shown in this example

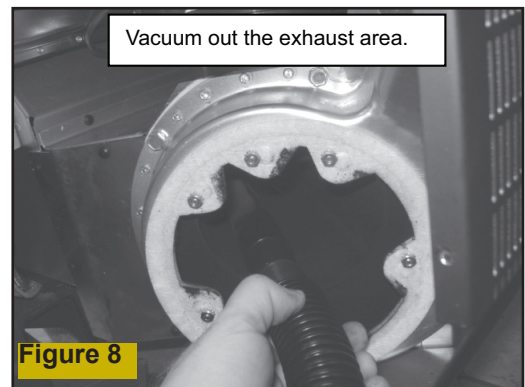


Figure 8

