

SRV7000-868

Convection Blower

INSTALLATION INSTRUCTIONS

Before Installing

- **ALWAYS** unplug the unit before beginning any work
 - Allow the unit to cool completely if recently used
 - Work in a well-lit area with proper tools
-

Installation Steps

1. Power Disconnection

Follow the proper shut down procedures and unplug the unit from the power source.

2. Access the Unit

Remove the convection blower access panel in the front of the stove under the firebox.

3. Disconnect Wiring

Disconnect the wire to the exhaust blower from the wiring harness.

4. Remove Old Blower

- Remove the set screws holding the blower in place.
- Remove the blower and gasket from the stove.

5. Install New Blower

Install the new blower and gasket with screws in the same orientation as the old blower.

6. Connect Blower Wiring

Connect the wire from the exhaust blower into the wiring harness.

7. Final Assembly

Reinstall the convection blower access panel onto the front of the stove.

8. Power Connection

Plug the stove back into the power source.

Post-Installation Check

- Verify all connections are secure
- Test blower operation before closing panels
- Check for any unusual noises or vibrations

Support

If you encounter any issues during installation, consult your owner's manual or contact technical support via our contact form.