


3.10. REMOVAL AND REPLACEMENT OF GASKETS

Exhaust blower cleanout trap gasket


Step 1:

Slide the left side panel about 10" toward the front. In order to remove the side panel, align the rear bearing with the circular opening in the sliding rail then pull it out.

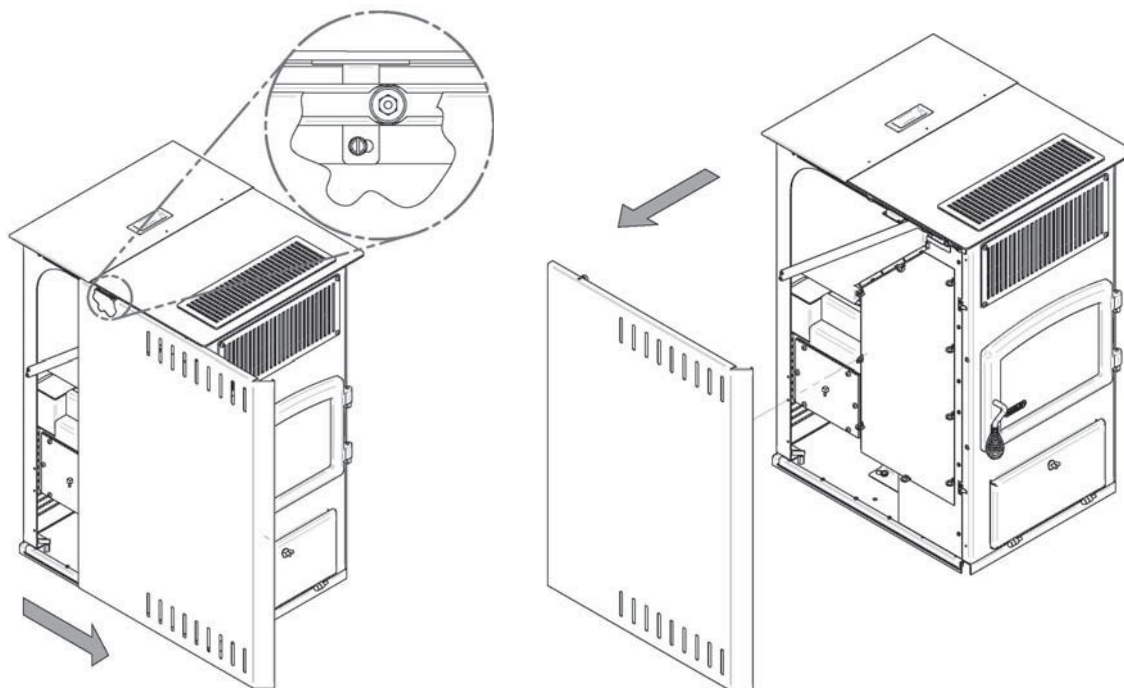


Step 2:

Remove all 6 bolts securing the exhaust blower cleanout trap. Remove the worn gasket and clean-up the contact surfaces. Keep the bolts for further instructions.

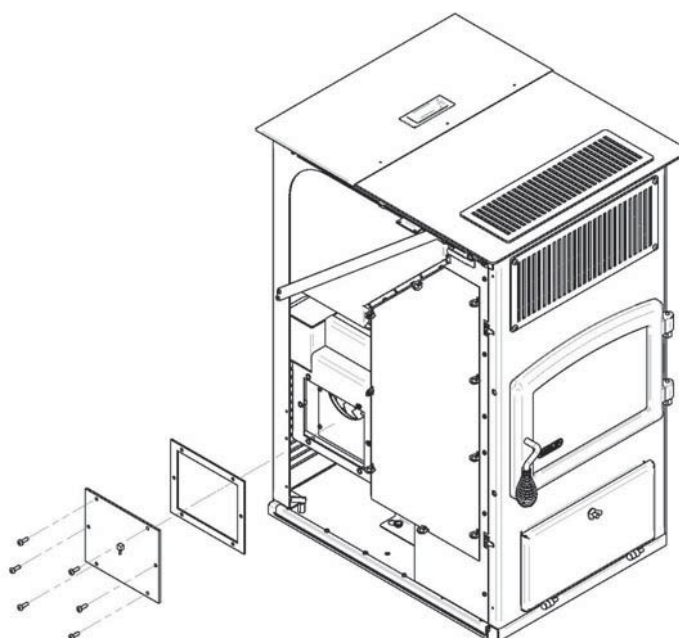


Step 3:

Remove all 4 bolts securing the cleanout plate located inside the exhaust blower cage assembly. Remove all accumulation of soot within the housing using an ahs vacuum. Put back the cleanout plate and its respective bolts in place.

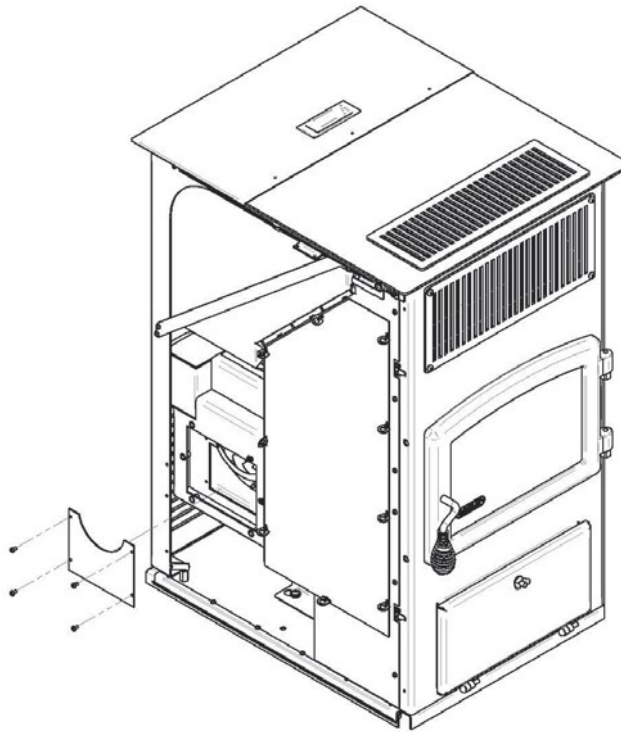**Step 4:**


Apply gasket #21344 from AC09190 on the exhaust blower cleanout trap and secure it all with all 6 bolts kept on step 2.

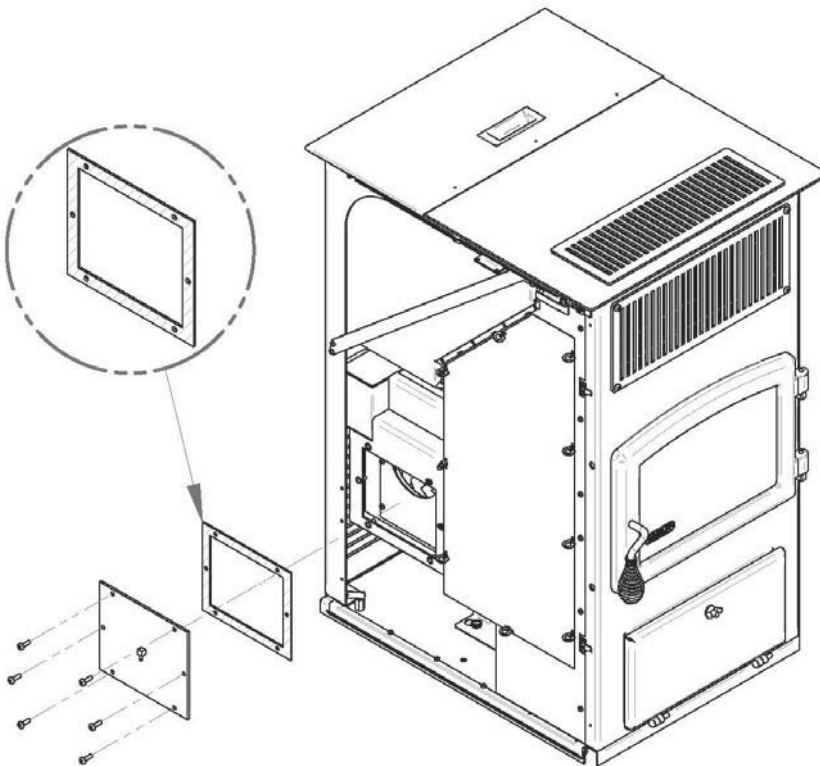

Front left cleaning and replacing gasket


Step 1:

Remove the side air jacket access panel by untying the 9 spring clips.

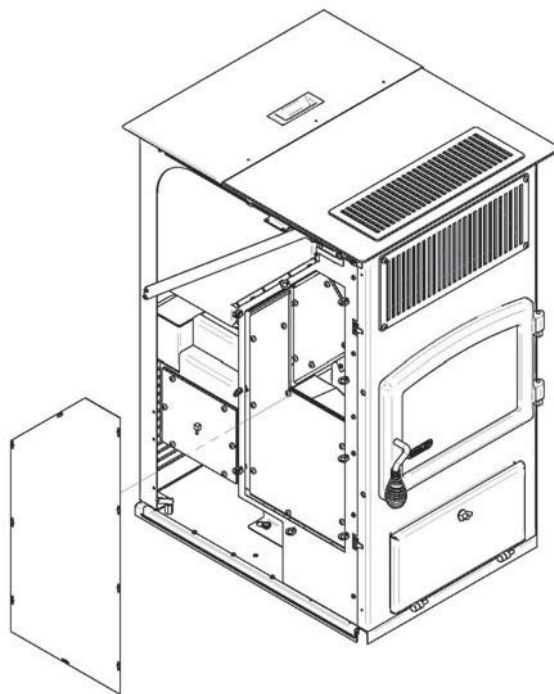


Step 2:

Remove all 8 bolts securing the cleanout trap. Remove the worn gasket and clean-up the contact surfaces. Clean-up the dirty area inside the appliance with an ash vacuum. Apply gasket #21352 from AC09190 on the cleanout trap. Put back in place the cleanout trap with its respective bolts.

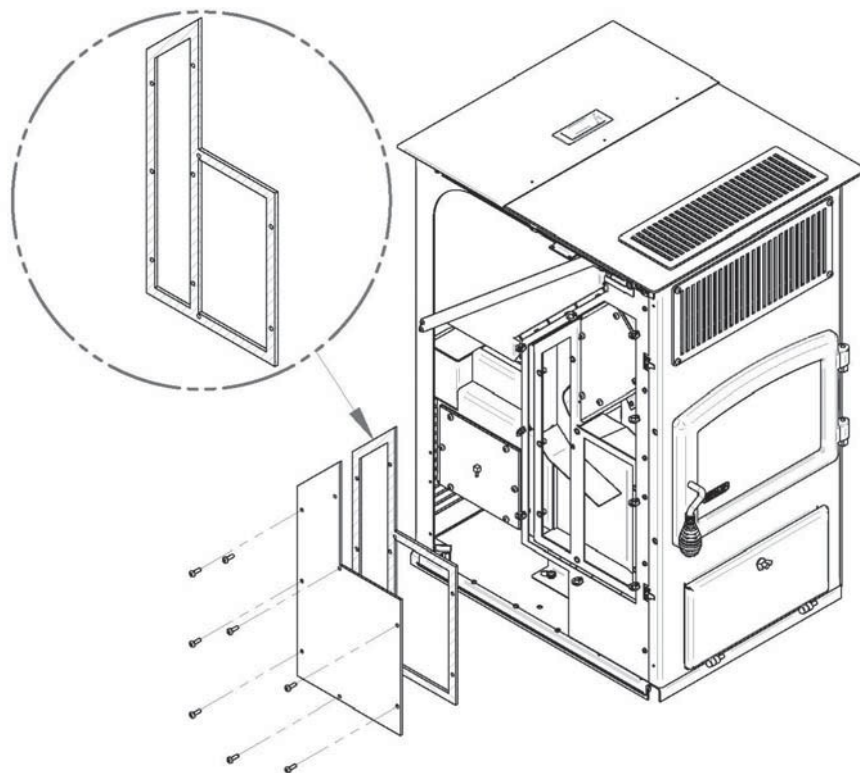

Step 3:

Remove all 5 bolts retaining the upper cleanout trap. Remove the worn gasket and clean-up the contact surfaces. Clean-up the dirty area inside the appliance with an ash vacuum. Apply gasket #21348 from AC09190 on the cleanout trap. Put back in place the cleanout trap with its respective bolts.

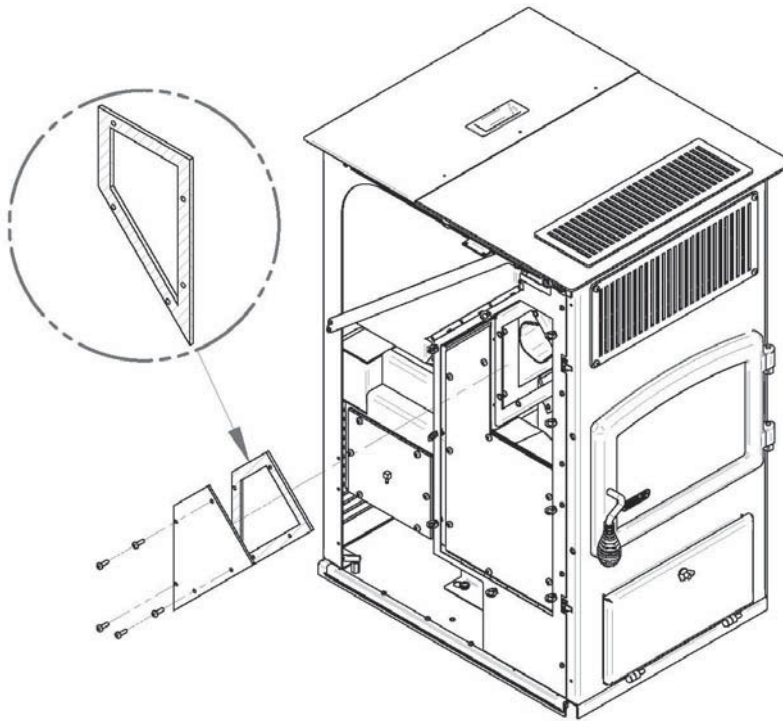**Step 4:**

Put back in place the side air jacket access panel and re-attach all 9 spring clips.

