

Baffle Removal

THE BAFFLE SHOULD ONLY BE REMOVED WHEN CHIMNEY IS BEING CLEANED.

DO NOT OPERATE WITH BAFFLE ASSEMBLY OR INSULATION REMOVED.

1. Remove retaining pin located just beneath the baffle at the rear inside top of the firebox (Figure 1).
2. Lift baffle up on one side then lift up and remove one of the side brick rails. Lift the baffle up and pull forward to disconnect it from the Baffle Air Tube.
3. Slide the baffle to the side with the rail in place, then tilt baffle sideways to drop down and remove from firebox.
4. To re-install the baffle, perform the removal steps in the reverse order. Ensure that the two side pieces of insulation are set in place against the baffle. If the insulation is damaged during removal, it should be replaced.

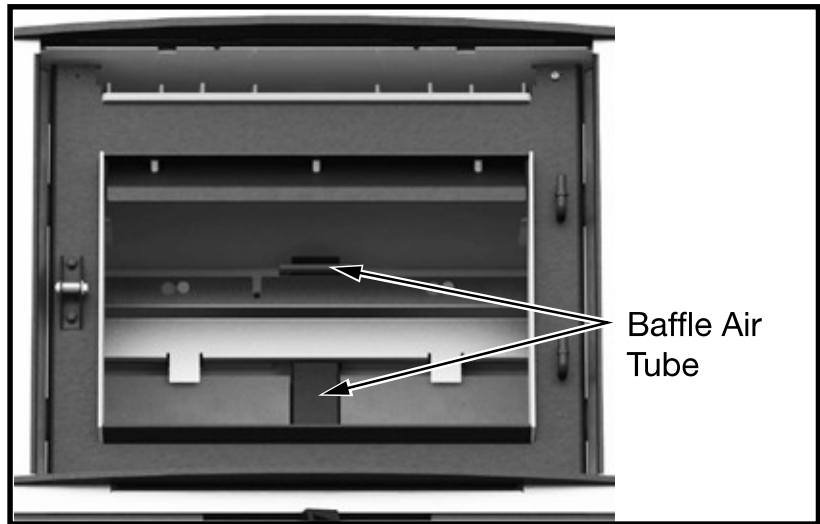


Figure 1: Baffle Air Tube.

WARNING: AFTER YOU REMOVE THE BAFFLE, ALWAYS COVER THE TOP OF THE BAFFLE AIR TUBE LOCATED IN THE REAR OF THE FIREBOX. THIS PREVENTS DEBRIS FALLING DOWN THE TUBE. FAILURE TO DO SO WILL RESULT IN POOR OPERATION AND POSSIBLE DAMAGE TO FIREPLACE COMPONENTS.

Secondary Air Box Cleaning

The secondary air box is located on the bottom rear of the fireplace and can be accessed for cleaning by removing the small access cover located on the bottom of the firebox just in front of the Baffle Air Tube.

1. Remove the two bottom center back bricks to expose the access cover, then remove the 2 screws holding the access panel to the firebox bottom.
2. Looking through the hole in the firebox bottom, inspect the Airbox for debris.
3. If debris is present, carefully use a vacuum to clean out any ash through the hole .
4. Replace the access cover, and install the bricks.

*** MAKE SURE THE GASKET IS IN GOOD CONDITION AND POSITIONED CORRECTLY.**

IF IT IS DAMAGED THEN IT MUST BE REPLACED.

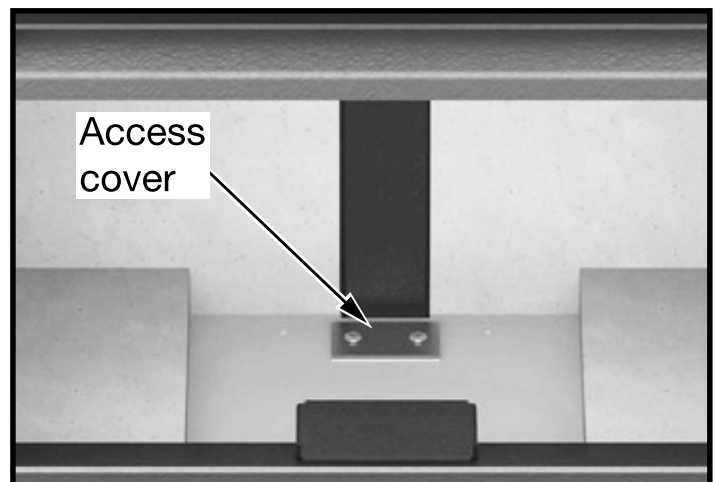


Figure 2: Secondary Airbox clean out cover.